


INSTALLATION AND OPERATING INSTRUCTIONS

→ EVOLUTION EV HAM

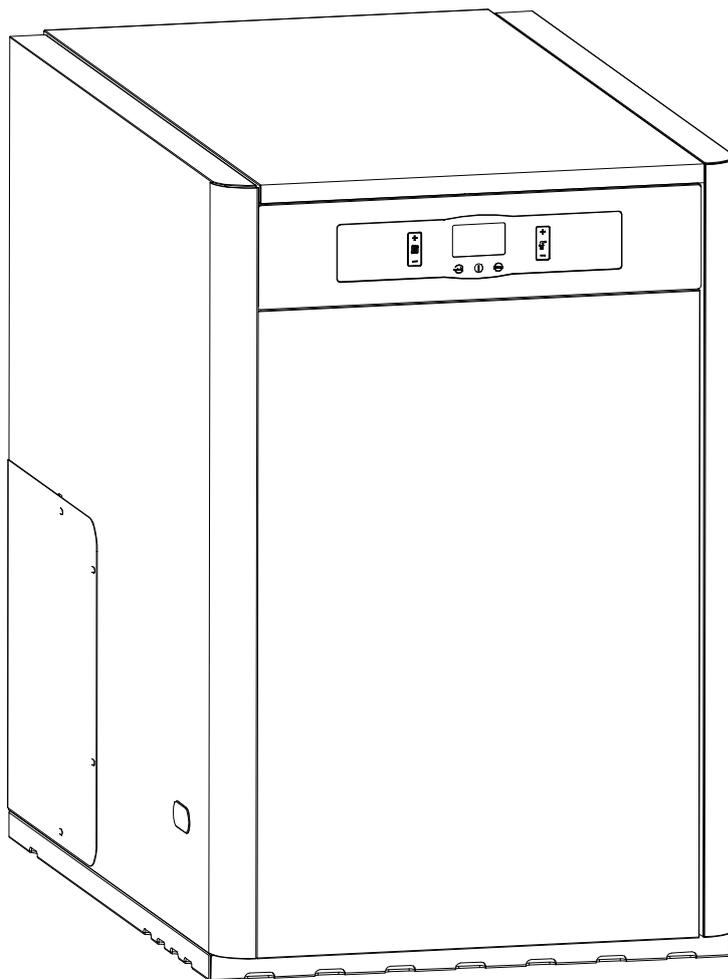

DOMUSA
T E K N I K

Thank you for choosing a DOMUSA TEKNIK heating boiler. From the range of **DOMUSA TEKNIK** products you have chosen the **Evolution EV HAM** model. This boiler is capable of providing you with the temperature comfort suitable for your home, as well as balanced and economical Domestic Hot Water (DHW). This always together with a proper and gas-oil fed hydraulic installation.

This manual forms an essential part of the product and it must be given to the user. Read the warnings and recommendations in the manual carefully, as they contain important information on the safety, use and maintenance of the installation.

These boilers are to be installed by skilled personnel only, in accordance with the legislation in force and following the manufacturer's instructions.

The start-up of these boilers and any maintenance operations must only be carried out by **DOMUSA TEKNIK**'s Authorised Technical Assistance Services.

Incorrect installation of these boilers could result in damage to people, animals or property, and the manufacturer will hold no liability in such cases.


DOMUSA TEKNIK informs all parties concerned that, in compliance with section 1 of the first additional provision of Law 11/1997, the responsibility for delivering packaging waste or used packaging for its proper environmental management will be that of the final owner of the product. At the end of its useful life, the product must be taken to a selected collection point for electrical and electronic equipment or must be returned to the distributor at the time of purchasing a new equivalent appliance. For more detailed information on the collection schemes available, contact either the collection facilities of the local authority or the distributor where the purchase was made.

CONTENTS

	<u>Page</u>
1 LIST OF COMPONENTS	2
2 CONTROL COMPONENTS	3
3 INSTALLATION INSTRUCTIONS	4
3.1 LOCATION	4
3.2 HYDRAULIC INSTALLATION	4
3.3 ELECTRICAL CONNECTION	4
3.4 FUEL INSTALLATION	4
3.6 INSTALLING THE SRAM2/EV UNDERFLOOR HEATING KIT (OPTIONAL)	5
3.7 INSTALLING HEATING CIRCUIT 2 (OPTIONAL)	5
4 COMBUSTION PRODUCTS EXHAUSTION	6
4.1 EXTERNAL POSITION OF THE GAS EVACUATION PIPES TERMINAL	6
4.2 PREPARATION OF THE BURNER AIR INTAKE FOR BALANCED FLUE OPERATION MODE	7
4.3 COMBUSTION PRODUCTS EXHAUSTION AND AIR INTAKE DUAL-DUCT DEVICE Ø80 (TYPR C ₅₃)	8
4.4 DOUBLE CONDUIT TO COAXIAL EXHAUSTION TRANSFORMATION	9
4.5 COMBUSTION PRODUCTS EXHAUSTION AND AIR INTAKE HORIZONTALLY-ARRANGED COAXIAL DEVICE Ø80-125 (TYPE C ₁₃)	10
4.6 COMBUSTION PRODUCTS EXHAUSTION AND AIR INTAKE VERTICALLY-ARRANGED COAXIAL DEVICE Ø80-125 (TYPE C ₃₃)	11
5 FILLING THE INSTALLATION	12
6 DRAINING THE BOILER	12
7 SHUTTING DOWN THE BOILER	12
8 FIRST START-UP	12
9 INSTALLATION DELIVERY	12
10 DIGITAL DISPLAY	13
11 TEMPERATURE SELECTION	15
11.1 SELECTING THE BOILER SETPOINT TEMPERATURE	15
11.2 SELECTING THE DHW SETPOINT TEMPERATURE	15
11.3 SELECTING THE UNDERFLOOR HEATING FLOW SETPOINT TEMPERATURE (WITH SRAM2/EV KIT OPTION)	16
12 OPERATION	16
12.1 HEATING FUNCTION	16
12.2 DOMESTIC HOT WATER PRODUCTION FUNCTION	17
12.3 FUNCTIONING WITH AN SRAM2/EV UNDERFLOOR HEATING KIT (OPTIONAL)	17
12.4 HEATING CIRCUIT 2 FUNCTIONING (OPTIONAL)	18
13 ADDITIONAL FUNCTIONS	18
13.1 PUMP ANTI-BLOCK FUNCTION	18
13.2 ANTI-FROST FUNCTION	18
13.3 BOILER PRESSURE SENSOR FUNCTION	18
13.4 TELEPHONE RELAY CONNECTION	18
13.5 ROOM THERMOSTAT CONNECTION	18
13.6 KEYPAD BLOCK FUNCTION	19
14 SAFETY CUT-OUTS	20
14.1 TEMPERATURE SAFETY CUT-OUT	20
14.2 BURNER CUT-OUT	20
14.3 LOW PRESSURE CUT-OUT	20
15 BOILER MAINTENANCE	21
15.1 CLEANING THE BOILER	21
15.2 ANTI-FROST PROTECTION	22
15.3 BOILER WATER CHARACTERISTICS	22
16 CIRCULATING PUMP FLOW CURVES	23
16.1 CHARACTERISTIC CURVES OF THE PUMP	23
16.2 REGULATION OF THE CIRCULATION PUMP	23
16.3 PRESSURE DROP	23
17 DIAGRAMS AND MEASUREMENTS	24
18 TECHNICAL CHARACTERISTICS	25
19 ALARM CODES	26
20 CONNECTION DIAGRAM	27
21 ELECTRICAL DIAGRAM	28
22 BURNER	29
22.1 ASSEMBLY	29
22.2 BURNER START-UP	29
22.3 ADJUSTING THE COMBUSTION CONDITIONS	29
22.4 OIL PRESSURE ADJUSTMENT	31
22.5 OIL SUPPLY PIPING DIAGRAMS	31
22.6 TECHNICAL SPECIFICATIONS	32
22.7 NOZZLES	32
22.8 ELECTRICAL CONNECTION DIAGRAM	32
22.9 QUICK CONNECTOR	33
22.10 BURNER CONTROL OPERATING SEQUENCE	34
23 FAILURES	35
24 SPARES LIST	37
BOILER	37
BURNER	39


Evolution EV HAM

1 LIST OF COMPONENTS

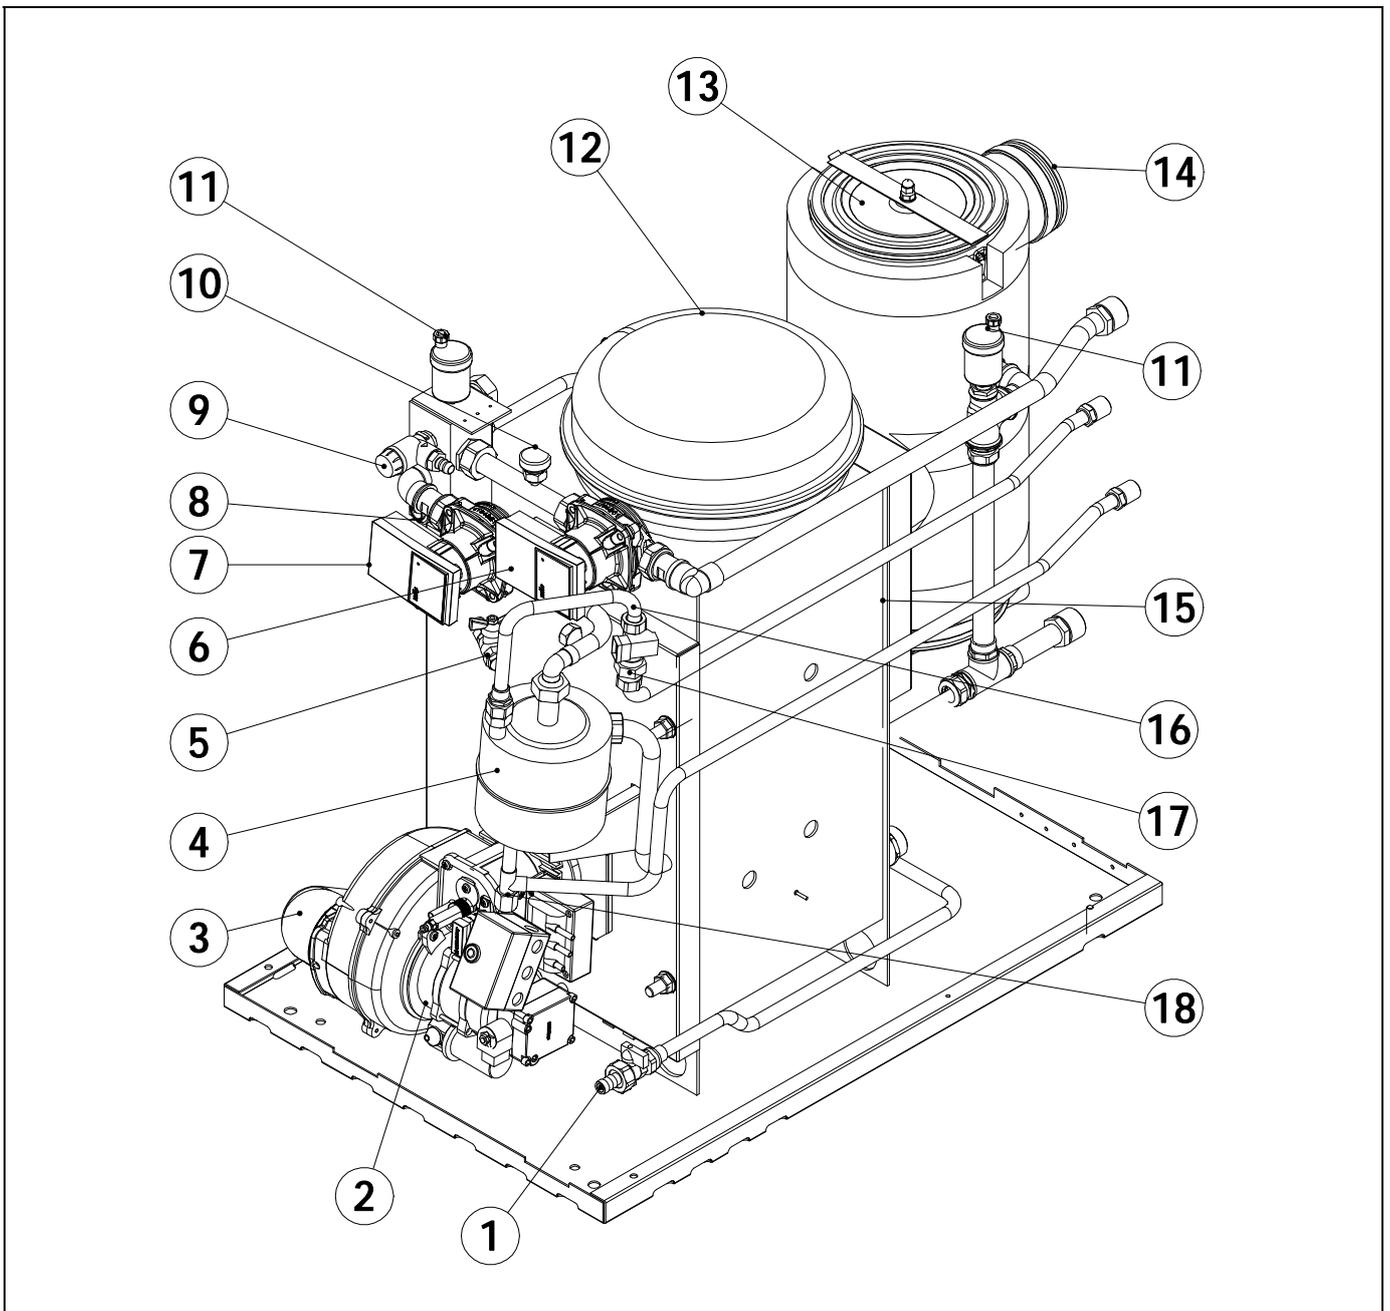

- | | |
|-----------------------------------|-----------------------------------|
| 1. Drainage valve. | 10. Pressure sensor. |
| 2. Domestic balanced flue burner. | 11. Automatic air vent. |
| 3. Combustion air inlet. | 12. Expansion vessel. |
| 4. Hot water heat exchanger. | 13. Stainless steel condenser. |
| 5. Filling valve. | 14. Fume exhaust duct. |
| 6. Heating circulating pump. | 15. Steel body. |
| 7. Hot water charge pump. | 16. Flow switch. |
| 8. Boiler temperature sensors. | 17. Hot water flow limit. |
| 9. Safety valve. | 18. Hot water temperature sensor. |

2 CONTROL COMPONENTS

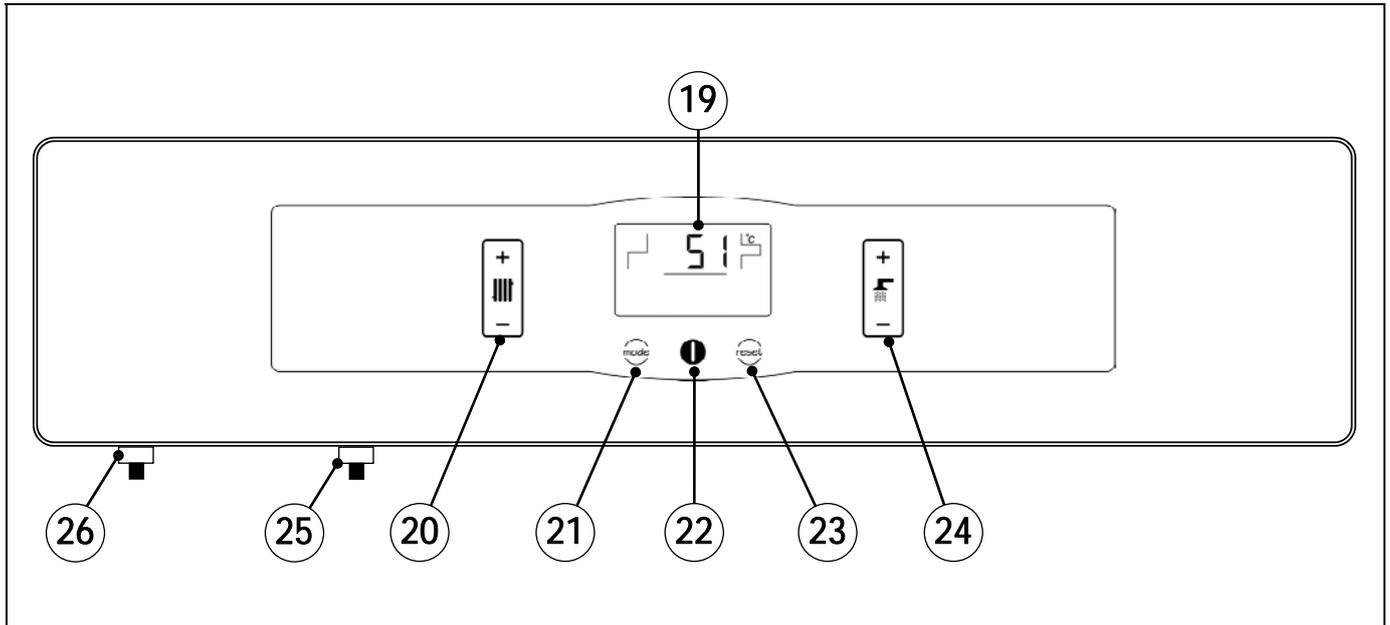

19. Digital display:

This is the boiler functioning display, on which all the operating information, settings and values appear. In standard operating mode (default display), the actual boiler temperature is shown. If any malfunctioning should occur, the corresponding alarm code will appear on the digital display.

20. Boiler temperature touch button:

This is used to select the boiler setpoint temperature. If **OFF** is selected, the heating function is disabled. To select the desired temperature, simply place your finger on the "+" or "-" symbols on the touch button to increase or decrease the desired boiler temperature.

21. MODE touch button:

When this button is touched the different boiler temperatures appear on the digital display.

22. ON touch button:

If you place your finger on this button for 1 second the boiler will switch on or off.

23. RESET touch button:

If the boiler is in lock-out mode as the alarm has been triggered, touch the RESET button to reset the lock-out and restore functioning. If you are modifying any of the settings or browsing the user menu, you may touch the RESET button to exit the menu **WITHOUT SAVING** and return to the previous menu level.

24. DHW temperature touch button:

This is used to select the setpoint temperature for domestic hot water. If **OFF** is selected, the DHW function will be disabled. To select the desired temperature, simply place your finger on the "+" or "-" symbols on the touch button to increase or decrease the desired DHW temperature.

25. Boiler safety thermostat:

This is a cut-out mechanism to ensure the boiler temperature does not exceed 110°C.

26. Fume safety thermostat:

This safety thermostat operates when the temperature of the combustion products exceeds 110°C, in order to protect the polypropylene duct.

Evolution EV HAM

3 INSTALLATION INSTRUCTIONS

The boiler must be installed by personnel authorised by the Department of Industry in accordance with the applicable regulations and standards in force. However, the following recommendations must be complied with when installing the boiler:


3.1 Location

The boiler must be installed in a enough ventilated room and sufficient access space must be maintained to carry out preventive or corrective maintenance operations.

3.2 Hydraulic Installation

The hydraulic installation must be made by qualified personnel. The applicable installation legislation is to be complied with, and the following recommendations should also be taken into account:

- The inside of the installation piping should be thoroughly cleaned before switching on the boiler.
- We recommend inserting cut-off valves between the installation piping and the boiler to simplify maintenance tasks.
- If a shut-off valve is fitted at the DHW inlet, it must have a safety valve incorporated, calibrated to 9 bar.
- For correct boiler functioning, there must be a pressure of at least 0.5 bar in the domestic hot water circuit.
- Before starting up the unit, it is essential to install the condensation siphon supplied with the boiler documentation on the condensation drain tube on the back of the boiler.
- **The condensation pipe should lead to a drain outlet**, as the Evolution boiler is a condensation boiler and a large amount of water may be generated. This connection should be made in accordance with the regulations for draining off condensation water to the drain network.
- Fill the siphon with water before starting up the unit, to prevent fumes coming out of it.

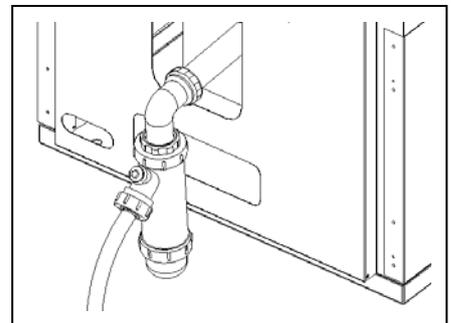

3.3 Electrical Connection

The boiler is equipped for connection at 230 V~, 50 Hz to terminals **1** and **2** of terminal strip **J1** (see "*Electrical Connection Diagram*"). **Remember to earth the appliance.**

The boiler has two terminal strips, **TA₁** (J5) and **TA₂** (J7) for connecting room thermostats or room chronothermostats (see "*Electrical Connection Diagram*") for remote control of heating circuits 1 and 2 respectively. To correctly connect the room thermostats, firstly remove the bridge joining the terminals of terminal strip **TA₁**. For connection to **TA₂**, simply connect the thermostat to the terminal strip.

3.4 Fuel Installation

The **Evolution** boiler is supplied with a **Domestic** sealed oil burner **(2)** (see model in "Technical Characteristics"). For the fuel installation, proceed in accordance with the burner instructions enclosed with this manual (see "Burner" section). The oil line installation and start-up of the burner must be carried out by qualified, authorised personnel.

3.5

3.6 Installing the SRAM2/EV Underfloor Heating Kit (Optional)

The procedure for suitably connecting the SRAM2/EV Underfloor Heating Kit to the **Evolution EV HAM** boiler is as follows:

- **Unplug the boiler from the mains.**
- Connect a flow temperature sensor (supplied with the kit) to sensor terminal strip **J3** (terminals 15 and 16), first removing the resistance (**Rr**) supplied by default (see "Electrical Connection Diagram").
- Fit the temperature sensor bulb according to the instructions enclosed with the kit.
- Connect the heating pump to supply terminal strip **J2** on the circuit 1 pump connection (pump BC₁; terminals N and 7) (see "Electrical Connection Diagram").
- Connect the PWM_C cable to sensor terminal strip **J3** (terminals 13 and 14) (see "Electrical Connection Diagram").
- Connect the 3-way mixer valve motor to supply terminal strip **J2** (terminals N, 8 (+) and 9 (-)) (see "Electrical Connection Diagram").

For correct hydraulic installation, carefully follow the assembly and connection instructions enclosed with the SRAM2/EV kit.

3.7 Installing heating circuit 2 (Optional)

All the models in the **Evolution** range of boilers are supplied with a circulation pump connected to heating circuit 1 (BC₁). In addition to this circuit, all the models are designed to control a second heating circulation pump in a second heating circuit (circuit 2, BC₂).

The hydraulic installation of heating circuit 2 should be made using the **optional flow circuit (IC')** on the rear of the boiler (see "Diagrams and Measurements"). If there is an SRAM2/EV underfloor heating kit connected to the optional flow IC', heating circuit 2 should be connected at the additional sockets provided in the kit (on the boiler T-connectors).

The circulation pump installed in heating circuit 2 must be electrically connected between terminals N and 6 on the supply connector block **J2** (see "Electrical Connection Diagram").

Evolution EV HAM

4 COMBUSTION PRODUCTS EXHAUSTION

The Evolution boilers are balanced flue oil boilers, so that the combustion products exhaustion is carried out by means of an outlet duct and an air intake from outside. It can also work by taking the air intake for the burner from the room, this is how the boilers come set from factory. To operate in this mode, the room must be sufficiently ventilated and not obstruct or block any ventilation openings.

4.1 External position of the gas evacuation pipes terminal

The installation of exhaustion of the products of combustion has to be carried out by qualified personnel staff and it will fulfill the requirements demanded in the legislation and effective regulatory schemes.


It is recommended that the position at the exhaustion duct exterior portion should be in accordance with the data of the following figures and table:

Exhaustion duct position	Minimum distance (mm)
A under a cornice	300
B between two horizontal ducts	1000
C from an adjacent window	400
D between two vertical ducts	1500
E from an adjacent ventilation grille	600
F under a balcony (*)	300
G under a window	600
H under a ventilation grille	600
I from a recess in the building	300
J from a corner of the building	300
K from the floor	2500
L from a vertical or horizontal duct or outlet (**)	300
M from a frontal surface at a distance of 3 metres from the fume outlet	2000
N as above, but with an opening	3000

(*) Providing the width of the balcony is not over 2000 mm.

(**) If the materials from which the pipe is made are sensitive to the action of the flue gases, this distance should be over 500 mm.


IMPORTANT: All accessories used for combustion product removal and air intake are to be those supplied by DOMUSA TEKNIK.

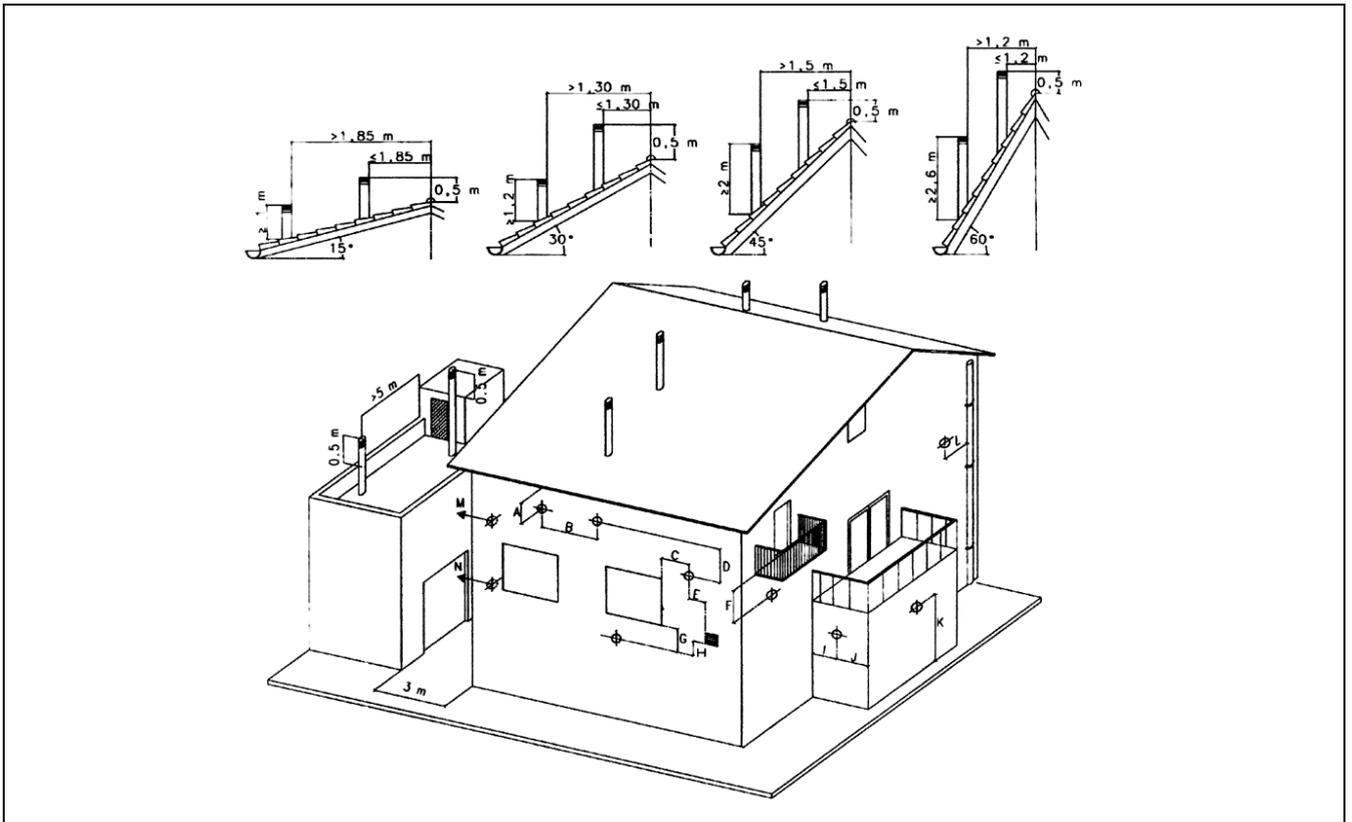

4.2 Preparation of the burner air intake for balanced flue operation mode

Evolution boilers come prepared from factory for operation by taking the intake air for the burner from the room.

In case of choosing room sealed mode operation, with the evacuation of the combustion gases through an outlet conduct and a independent external air intake, air intake for the burner must be prepared following these instructions:

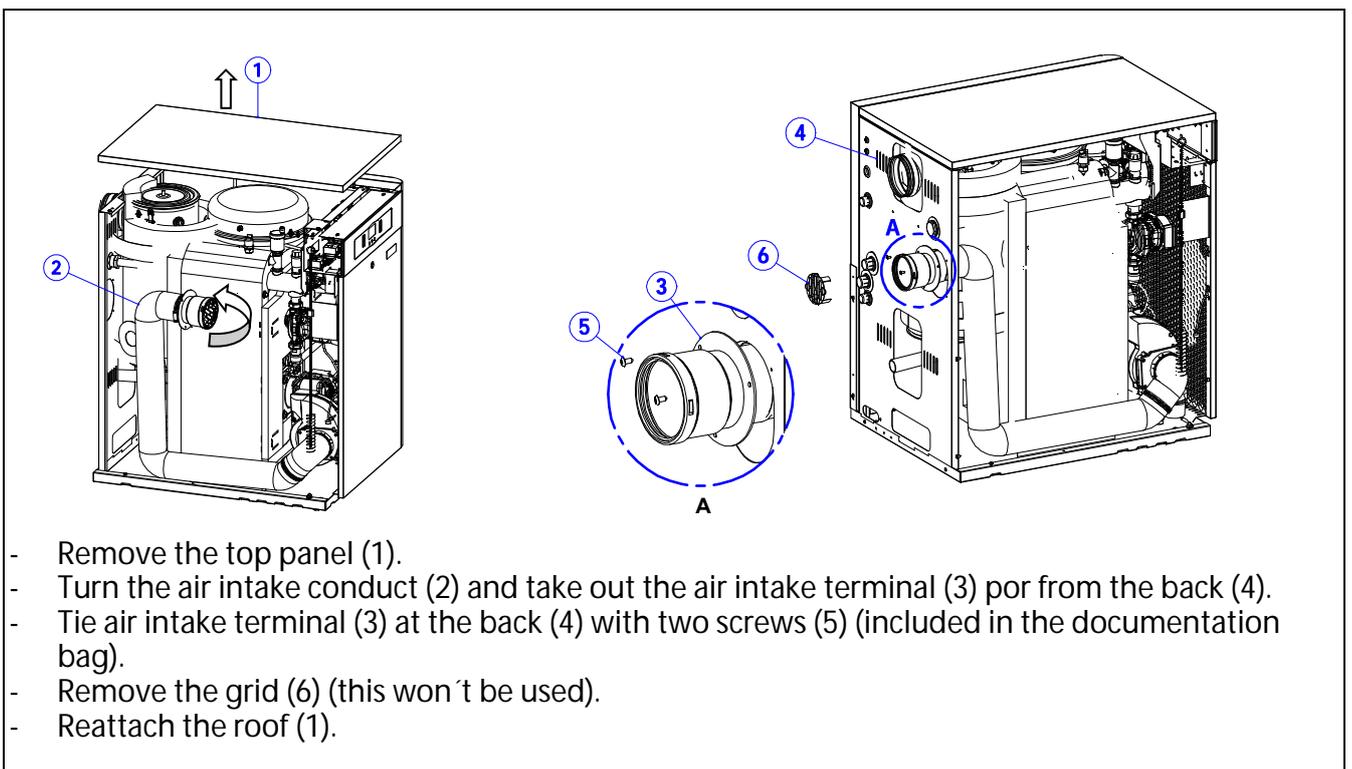


Evolution EV HAM

4.3 Combustion products exhaustion and air intake dual-duct device Ø80 (typr C53)


For this type of boiler, the removal of combustion products and air intake take place through separate Ø80 mm. dual ducts. The Ø80 dual duct outlet kit, code CGAS000186, is used for this purpose. This is the type of fume removal provided for **Evolution** boilers by default.

The **maximum length** of pipe that can be installed is 15 metres for the model EV 35 HAM and 17 meters for the model EV 25 HAM, which is the result from adding the pipe metres for the air intake and those of the combustion products exhaustion. Each elbow of 90°, or two of 45°, reduces the available length by 1 meter and each horizontal meter is equivalent to 2 vertical meters.

It is recommended that the exhaustion duct be fitted in a slightly upwardly-inclined direction, at around 2° - 3°, thus preventing any water and condensation from dripping out.

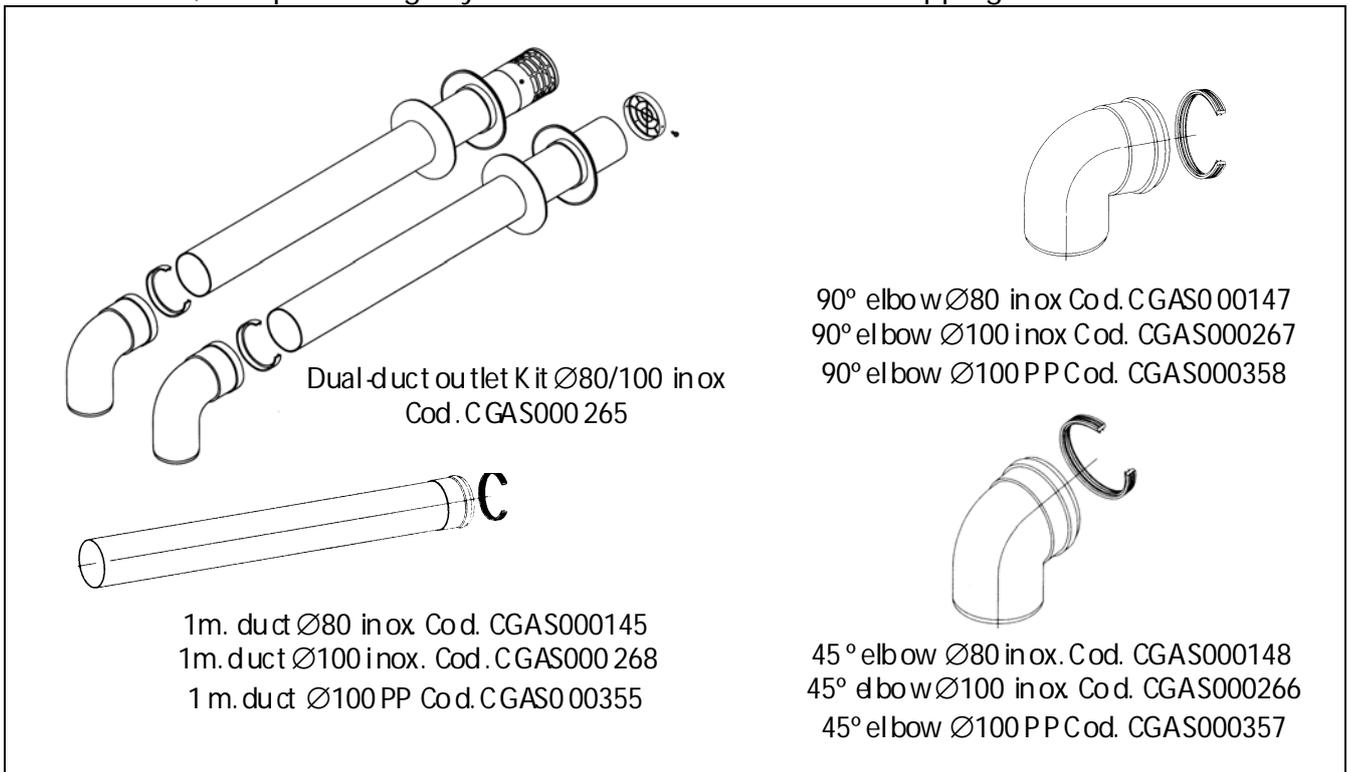


Examples of installation:

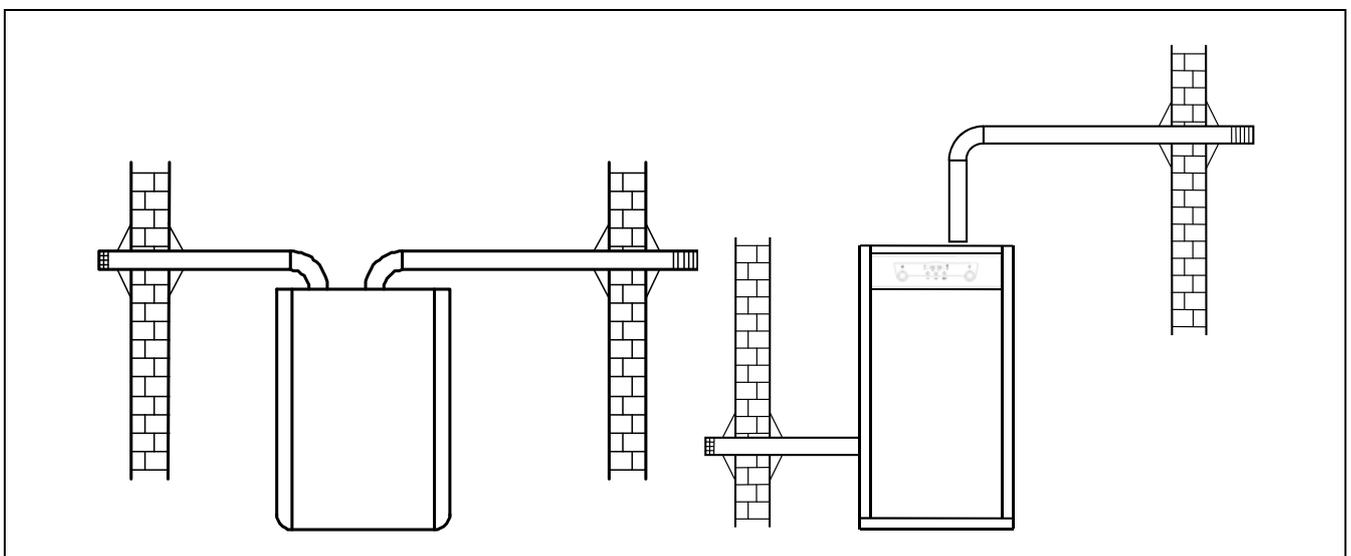

4.4 Double conduit to coaxial exhaustion transformation


The boiler **Evolution** is given prepared for the exhaustion of the products of combustion and air intake by means of the system of double conduit of Ø80. When you want to carry out the exhaustion of combustion gases by means of coaxial tube of Ø80/125, you will use for it a Kit adaptor for coaxial tube Ø80/125 (given under order) Code CGAS000213

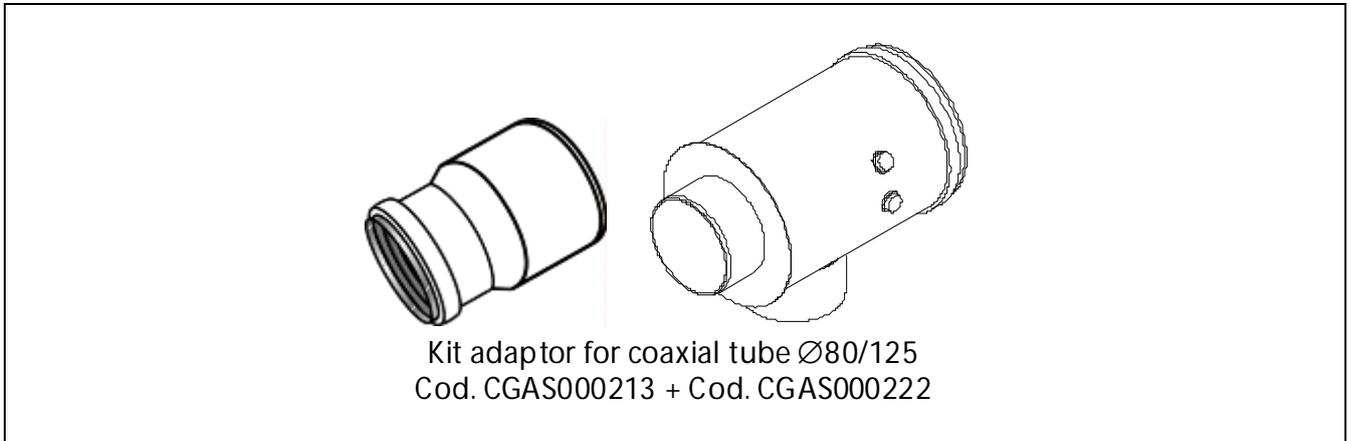

The transformation will be able to realize with two different mounting setups:

1. Back exit: it will be enough with disassembling the combustion air intake of the boiler, unscrewing the three screw, mount the adaptor in the exit of flue gases of the boiler backwards and using the flexible tube of entry of air, connect it to the adaptor.
2. Lateral or upwards exit: it will be realized in the same way, but to mount the adaptor kit laterally it is necessary to mount an elbow of 90° Ø80 (code CGAS000147), before the adaptor in the exit of flue gases.

In the following pictures they can observe both setups:

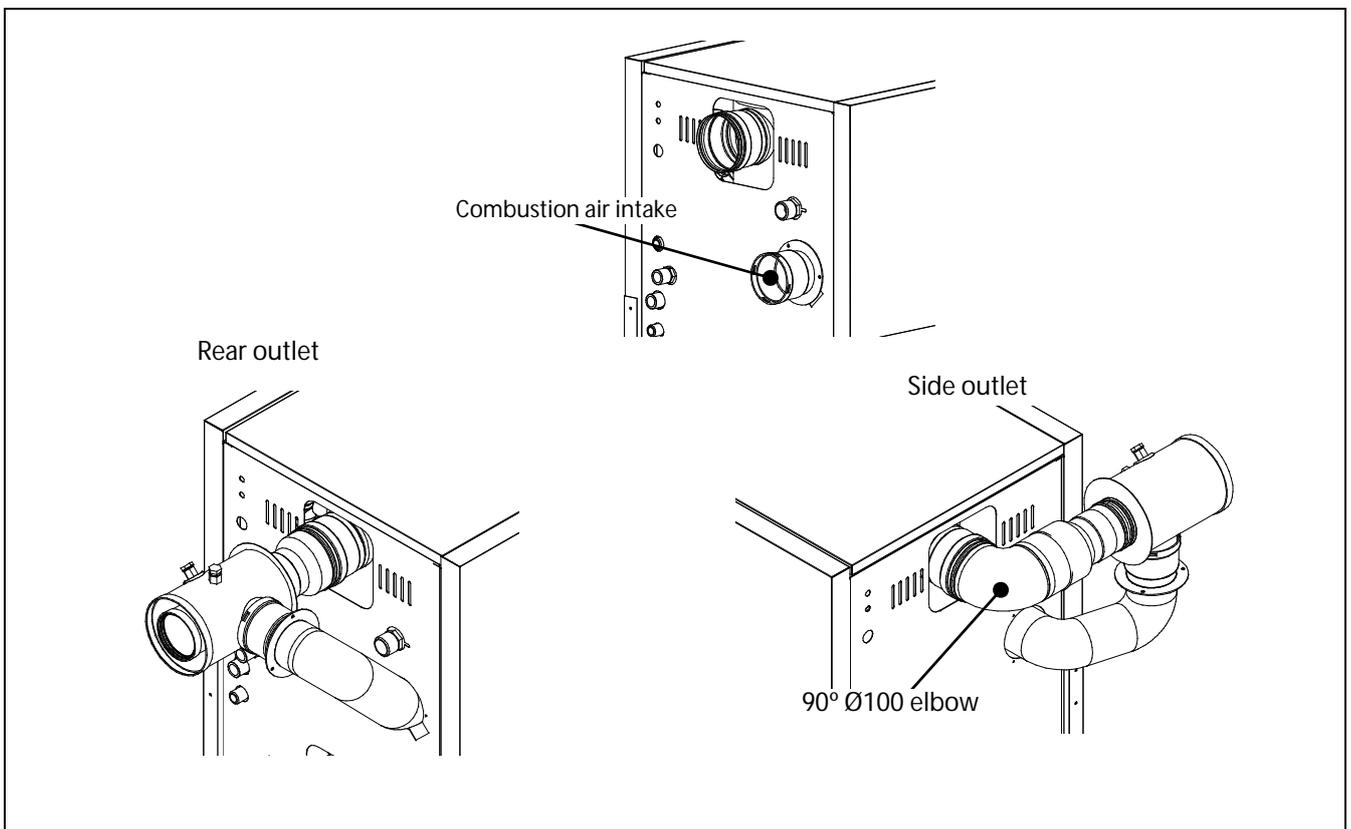


Evolution EV HAM

4.5 Combustion products exhaustion and air intake horizontally-arranged coaxial device Ø80-125 (type C₁₃)


The removal of combustion products and air intake can be made using concentric Ø80 mm ducts for the removal of combustion products and Ø125 mm ducts for the air intake, using the 1m Ø80-125 horizontal duct kit, code CGAS000189.

The **maximum horizontal length** counted from the boiler, including the kit end, is 7 metres for the model EV 35 HAM and 8 meters for the model EV 25 HAM. Each elbow of 90°, or two of 45°, reduces the available length by 1 meter and each horizontal meter is equivalent to 2 vertical meters.

It is recommended that the pipe be fitted in a slightly upwardly-inclined direction, at around 2° - 3°, to prevent any water or condensation from dripping out.

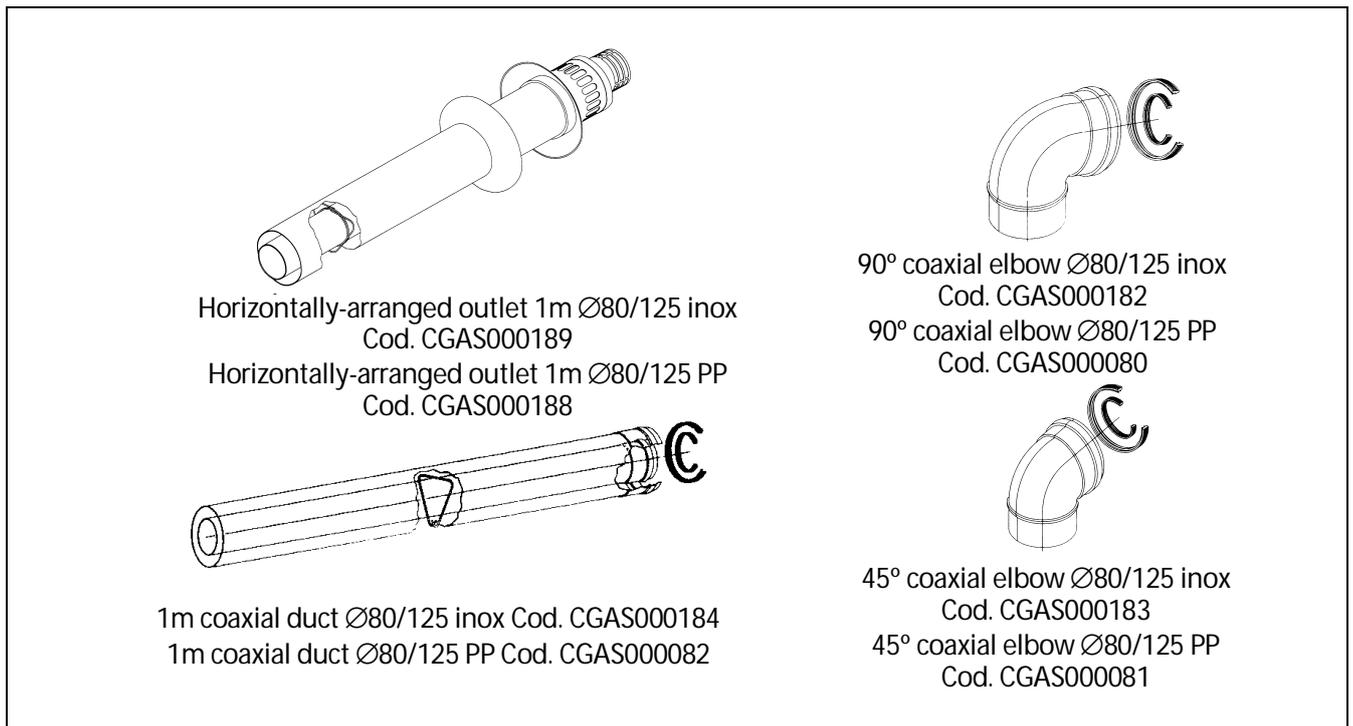


Examples of installation:

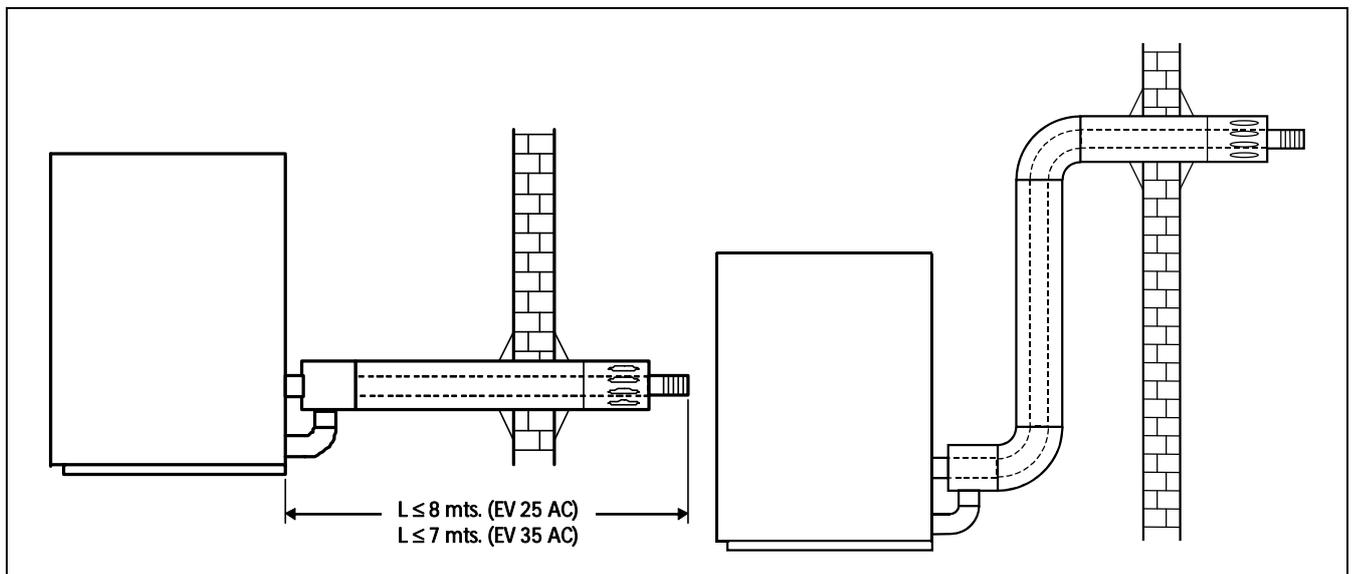


4.6 Combustion products exhaustion and air intake vertically-arranged coaxial device Ø80-125 (type C₃₃)

The removal of combustion products and air intake can be made using concentric Ø80 mm ducts for the removal of combustion products and Ø125 mm ducts for the air intake, using the Ø80-125 vertical duct kit, code CGAS000181.

The **maximum vertical length** counted from the boiler, including the kit end, is 8 metres for the model EV 35 HAM and 10 metres for the model EV 25 HAM. Each elbow of 90°, or two of 45°, reduces the available length by 1 meter and each horizontal meter is equivalent to 2 vertical meters.

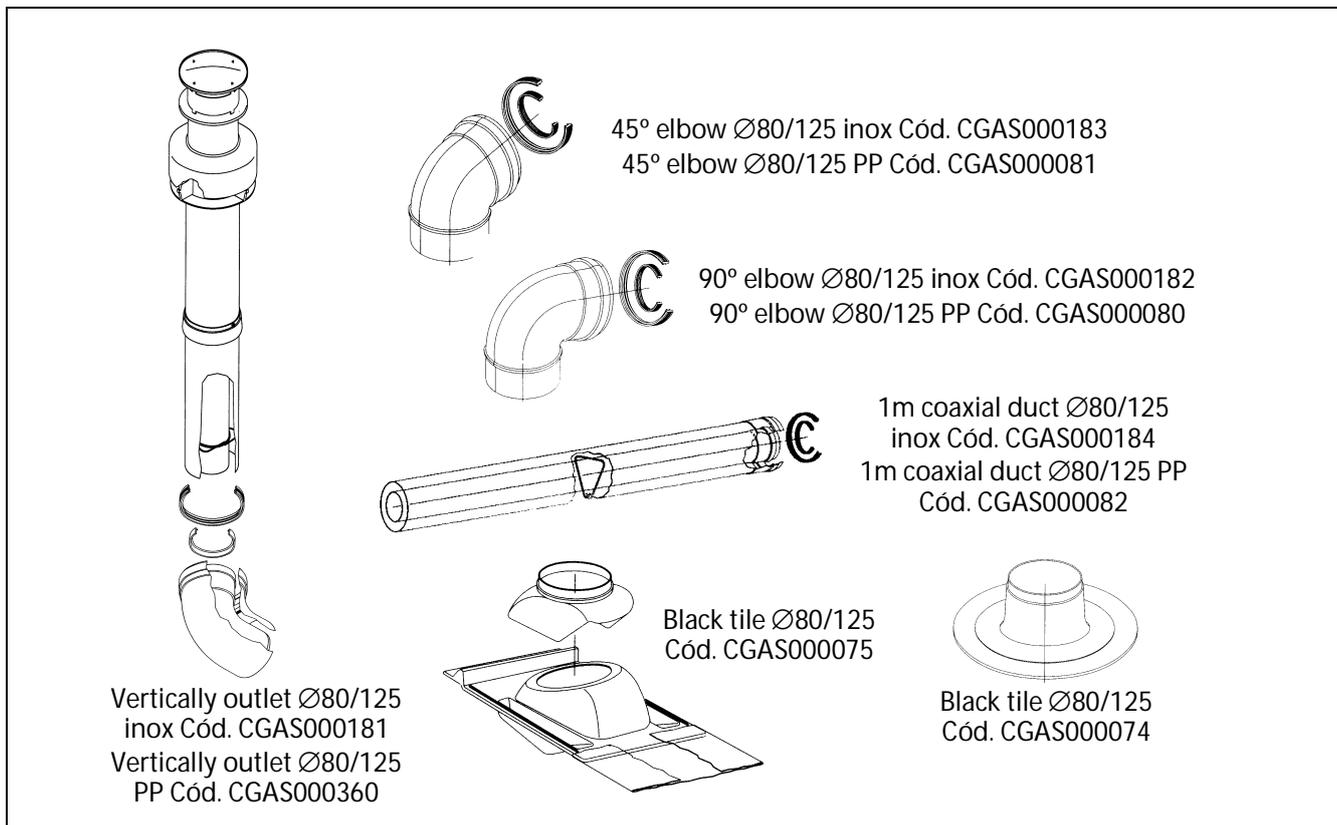

Examples of installation:

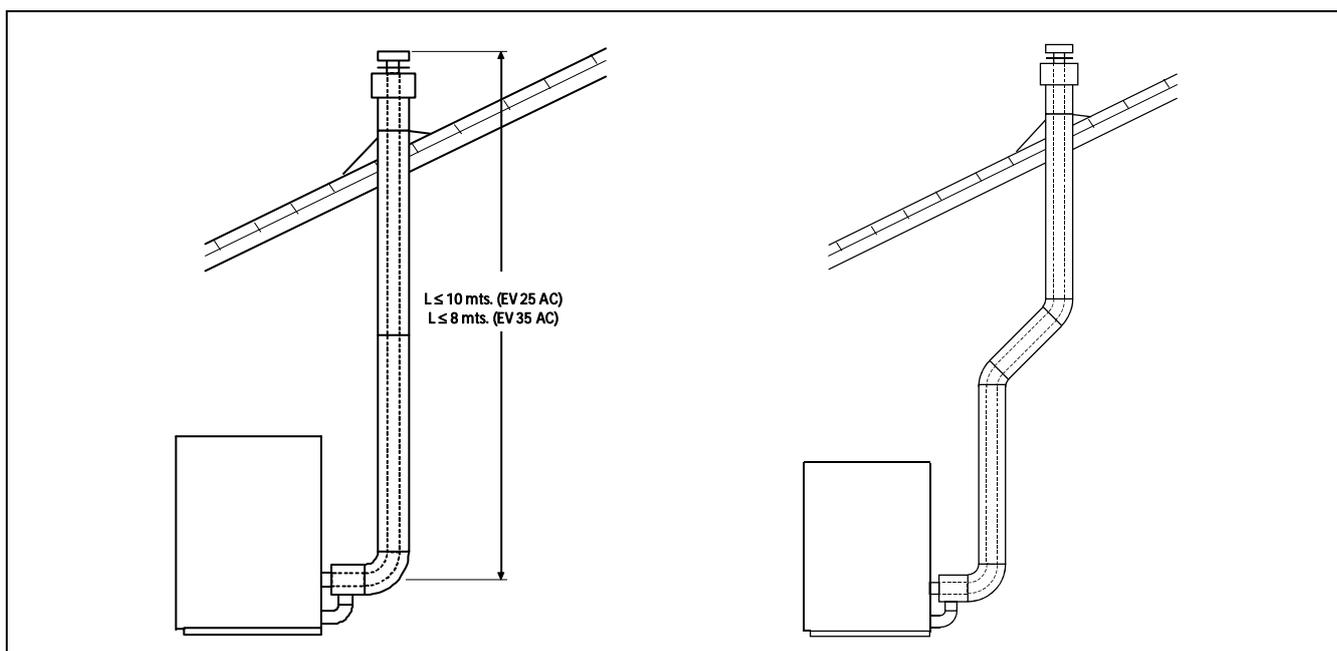

Evolution EV HAM

5 FILLING THE INSTALLATION

To fill the installation, open the fill valve **(5)** until a pressure of 1 - 1.5 bars appears on the "boiler pressure" setting on the display. The circuit should be filled slowly and with the automatic air bleed valve cap **(11)** loose, to let the air out of the installation. The air should also be bled from the rest of the installation using the air bleed valves provided. When the installation has been filled, close the fill valve.

Evolution boilers have a pressure sensor **(10)** for controlling the pressure of the installation. If the installation pressure drops below a minimum of 0.5 bar, the boiler will not switch on and a low pressure alarm will appear on the display ("**AP**").

NOTE: Switching on the boiler with no water inside could result in serious damage.

6 DRAINING THE BOILER

The water is drained from the boiler by opening the air drain valve **(1)** inside the boiler (on the lower right hand side on opening the door). Connect a flexible tube to this valve and run it to a drain. After draining the boiler, close the valve again and remove the flexible tube.

7 SHUTTING DOWN THE BOILER

To switch off the boiler, place your finger on the power touch button **(22)** for 1 second. In **Off mode**, while the boiler is plugged into the mains and connected to the fuel installation, its heating and DHW functions will be switched off but the anti-frost protection and pump anti-block functions will remain activated.

To shut down the boiler functioning completely, unplug it from the mains and cut off the fuel supply.

8 FIRST START-UP

For the **guarantee to be valid**, the boiler must be started up for the first time by an **official DOMUSA TEKNIK Technical Assistance Service**. Before beginning start-up, the following must be complied with:

- The boiler must be electrically connected to the mains.
- The installation must be filled with water (1 - 1.5 bar must be indicated on the digital display).
- Fuel must be reaching the burner at a pressure of no more than 0.5 bar.


9 INSTALLATION DELIVERY

After the initial start-up, the Technical Assistance Service will explain to the user how the boiler functions, making any observations they consider relevant.

The installer is responsible for clearly explaining to the user the functioning of any control or regulation device forming part of the installation but not supplied with the boiler.





10 DIGITAL DISPLAY

The **Evolution** boiler is electronic and includes a digital display **(19)** showing the actual temperatures, the setpoint temperatures and the pressure of the installation. In standby mode, the actual boiler temperature in °C is shown on the display. The rest of the available display options can be browsed by touching the MODE button below the display, as follows:

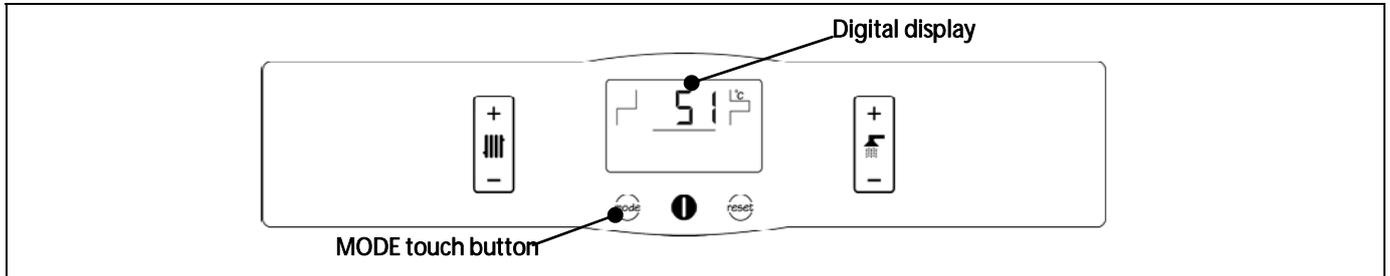

Press the set button successively to select the different display options. When the desired option has been selected, it will return to standby after ten seconds have elapsed.


The following table shows the different display options:

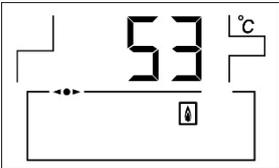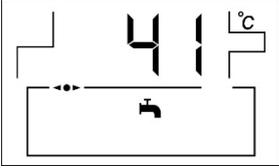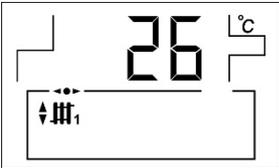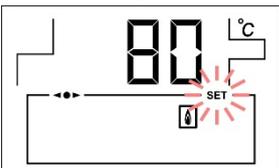	Standby. The actual boiler temperature is shown.
	Actual boiler temperature.
	Actual Domestic Hot Water temperature.
	Actual flow temperature of the underfloor heating installation (option SRAM2/EV only)
	Boiler setpoint temperature selected using the corresponding touch button (20) .


Evolution EV HAM




Underfloor heating installation flow setpoint temperature selected using the corresponding touch button **(20)**.
(option SRAM2/EV only)

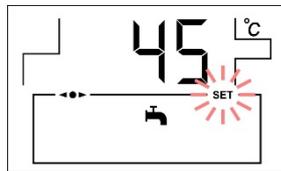


DHW setpoint temperature selected using the corresponding touch button **(24)**.

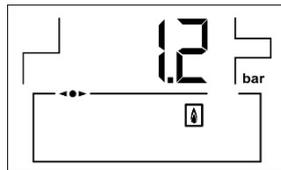


Actual boiler pressure, measured by the Pressure Sensor **(10)**.

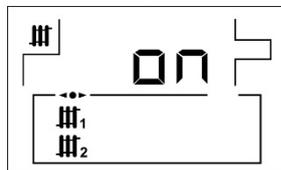

Indication of the heating demand status of each circuit connected to the boiler.

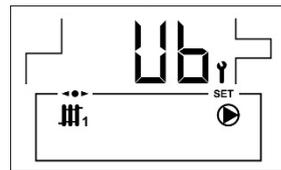


Setpoint of the heating pump speed **BC1**.

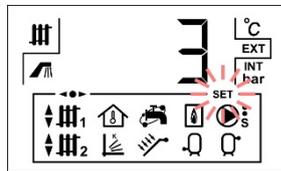

The desired display contrast can be adjusted using the touch button on the right of the display **(24)**.

11 TEMPERATURE SELECTION

11.1 Selecting the boiler setpoint temperature

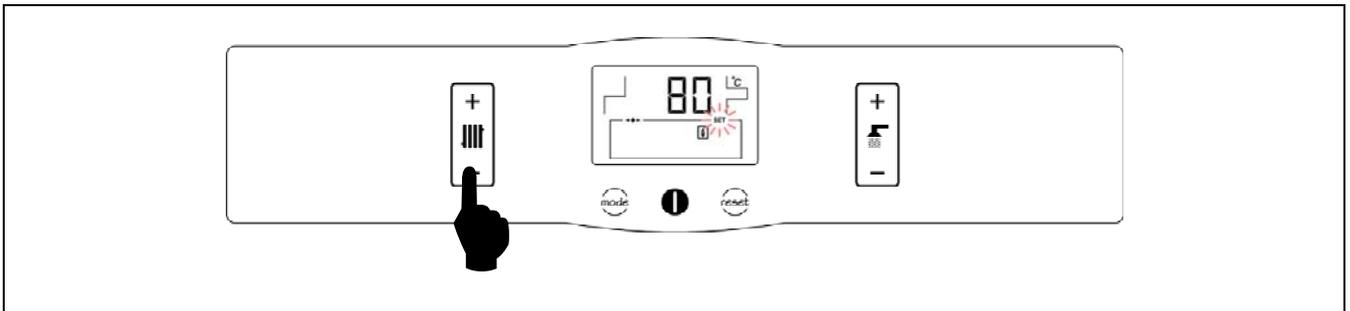


The desired boiler operating temperature is selected using the touch button, as shown in the figure. To select the desired temperature, touch the "+" or "-" symbols to increase or decrease the temperature respectively. When the temperature has been selected, the display will return to standby mode after a few seconds.

The boiler setpoint temperature can also be selected by using the MODE touch button to browse to the "*boiler setpoint temperature*" display option. When the display shows this option, touch the "+ /-" symbols to select the desired temperature.

If you wish to totally disable the boiler heating function (*Summer* mode), select the setpoint value "**OFF**" by touching the "-" symbol until this value appears on the display.

The permitted boiler setpoint temperature range is OFF and 30 - 85 °C. **Evolution** model boilers are condensing boilers. In order to obtain maximum boiler performance and energy savings, it is therefore recommended to select a setpoint temperature of 55-70 °C, providing this is permitted by the heating system installed and the insulation conditions of your home.

11.2 Selecting the DHW setpoint temperature

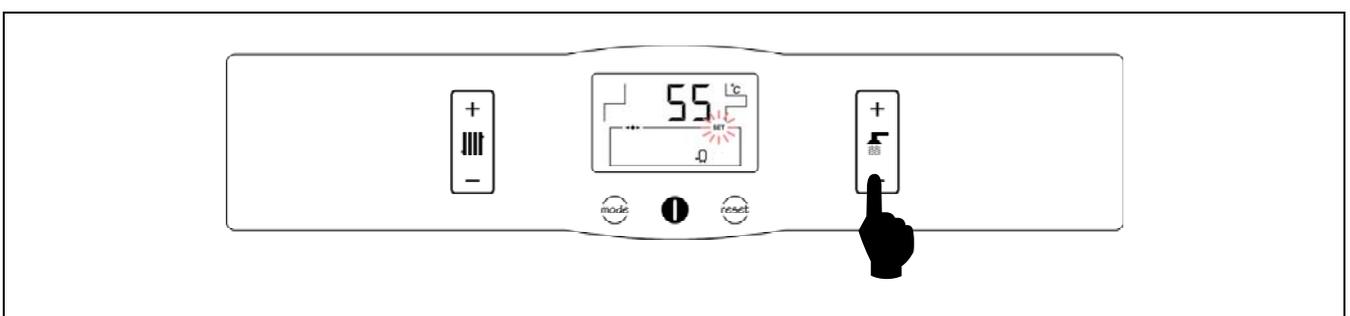


The desired DHW temperature is selected using the touch button, as shown in the figure. To select the desired temperature, touch the "+" or "-" symbols to increase or decrease the temperature respectively. When the temperature has been selected, the display will return to standby mode after a few seconds. The DHW setpoint temperature range permitted is OFF and 30 - 65 °C.

The DHW setpoint temperature can also be selected by using the MODE touch button to browse to the "*DHW setpoint temperature*" display option. When this option appears on the display, touch the "+ /-" symbols to select the desired temperature.

If you wish to totally disable the boiler's DHW production function, select the setpoint value "**OFF**" by touching the "-" symbol until this value appears on the display.

Evolution EV HAM

11.3 Selecting the Underfloor Heating flow setpoint temperature (with SRAM2/EV kit option)

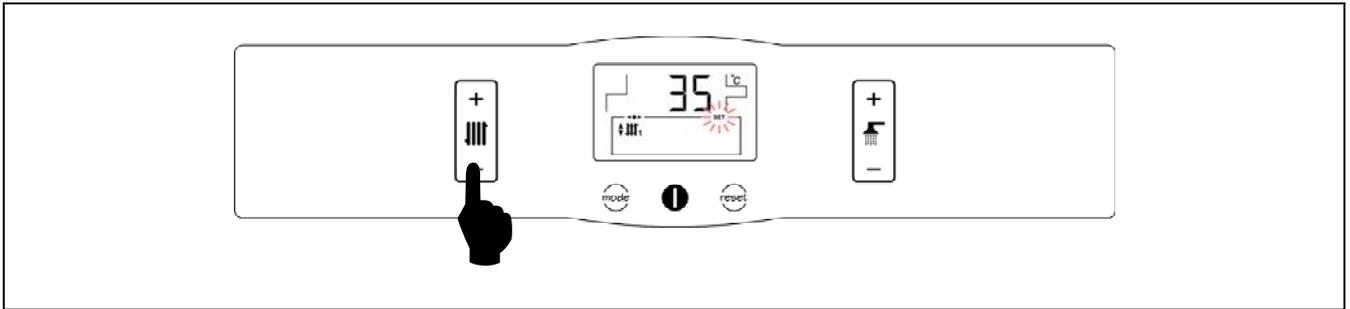

When the boiler is installed with the optional SRAM2/EV underfloor heating kit, the desired flow temperature of the installation can be selected using the touch button as shown in the figure above. To select the desired temperature, touch the "+" or "-" symbols to increase or decrease the temperature respectively. When the temperature has been selected, the display will return to standby mode after a few seconds.

The installation flow setpoint temperature can also be selected by using the MODE touch button to browse to the "*underfloor heating installation flow setpoint*" display option. When this option appears on the display, touch the "+ /-" symbols to select the desired temperature.

If you wish to disable the underfloor heating circuit function, select the setpoint value "**oFF**" by touching the "-" symbol until this value appears on the display.

The flow setpoint temperature range permitted is OFF and 0 - 45°C. To obtain optimum performance from the underfloor heating system installed, we recommend selecting a setpoint temperature of 25 - 35 °C, providing this is permitted by the heating system installed and the insulation in your home.

12 OPERATION

The **Evolution EV HAM** boiler is designed to heat a heating installation and provide instantaneous domestic hot water. Optionally, an Underfloor Heating Kit (SRAM2/EV) and/or a second heating circuit, heating circuit 2, may be connected to the installation to improve its performance.

12.1 Heating Function

In this mode, the boiler can heat up the heating installation. To do this, select the desired boiler setpoint temperature (see "*Selecting the boiler setpoint temperature*") and the temperature of room thermostat 1 (**TA1**). The burner will switch on. When the boiler reaches 60°C it is ready to heat up the heating installation and will start up the heating pump for this purpose. The burner will shut down when the boiler reaches the adjusted setpoint temperature. The heating pump and the burner will stop when the room temperature reaches or exceeds the temperature set on the installation's room thermostat (if it has one). If a hot tap is turned on, the instantaneous DHW production function will start up and provide constant domestic hot water at the selected DHW setpoint temperature.

The boiler heating function can be totally disabled (**Summer** mode) by selecting "**oFF**" as the boiler setpoint value. In this operating mode, only the instantaneous DHW production function will remain enabled.

NOTE: When the heating function is disabled, circuit 2 will also be disabled if it is connected.

12.2 Domestic Hot Water production function

In this mode, the boiler provides instantaneous DHW. To activate this mode, select the desired DHW setpoint temperature (see "*Selecting the DHW setpoint temperature*"). The burner will ignite until the boiler reaches 60 °C. If a hot tap is turned on, the instantaneous DHW production system will start up and provide constant hot water at the selected setpoint temperature.

The **Evolution EV HAM** boiler is equipped with system for **modulating** instantaneous DHW production and **progressive adjustment** of the Domestic Hot Water consumption temperature:

- **The modulation** allows the boiler power to constantly adapt to the hot water consumption requirements at all times, without altering the efficiency of the boiler. Consumption savings are thus obtained together with improved boiler functioning and lower emissions.
- **Progressive electronic adjustment** of the DHW temperature, a system designed by DOMUSA TEKNIK, enables the DHW consumption temperature to be stabilised at the temperature selected using the button on the control panel, and a constant hot water temperature with no variations is obtained **regardless of the water flow required and the cold water inlet temperature at any given time**. This enables optimum hot water comfort and adaptation to each user's particular needs.

If you wish, you may totally disable the domestic hot water production function by selecting "**OFF**" as the DHW setpoint temperature.

12.3 Functioning with an SRAM2/EV Underfloor Heating Kit (Optional)

The **Evolution EV HAM** boiler may be used with an SRAM2/EV Underfloor Heating Kit (fitted to heating circuit 1). This kit basically consists of a motorised 3-way mixing valve, a circulation pump and an underfloor heating installation flow temperature sensor. For correct hydraulic installation, carefully follow the assembly and connection instructions enclosed with the kit.

The underfloor heating installation is worked by the electronic boiler control. The installation flow sensor is used to adjust the temperature, selecting the installation flow setpoint temperature using the boiler setpoint adjustment touch button on the control panel, between OFF, 0 and 45 °C (see "*Selecting the Underfloor Heating flow setpoint temperature*"). In this operating mode, the electronic control sets the boiler setpoint temperature to 75°C by default, and the installation flow temperature can be adjusted to the selected setpoint temperature using the mixing valve.

The boiler setpoint temperature can be changed using the MODE touch button to browse to the "*boiler temperature setpoint*" display option. When the display shows this option, touch the "+ /-" symbols to select the desired temperature.

If you wish, the SRAM2/EV Underfloor Heating circuit function can be totally disabled, by selecting "**OFF**" as the installation flow setpoint temperature.

NOTE: When the Underfloor Heating circuit function is disabled by selecting OFF as the setpoint temperature, only circuit 1 will be disabled. Circuit 2 will continue to function.

Evolution EV HAM

12.4 Heating circuit 2 functioning (Optional)

All the models in the **Evolution EV HAM** range of boilers have the option of controlling a second heating circuit. This requires the installation of a second circulation pump on the boiler. To correctly install this pump, carefully follow the instructions given in the "*Installing heating circuit 2*" section of this manual.

Heating circuit 2 will work with the selected boiler setpoint temperature (see "*Selecting the boiler setpoint temperature*") and the temperature of room thermostat 2 (**TA2**) (if the boiler has one). The burner and the heating pump of circuit 2 (**BC₂**) will begin to function until the installation reaches the selected boiler setpoint temperature (or the temperature on room thermostat 2, if the unit has one). When the temperature of the installation drops below the selected boiler temperature, the burner will start up again, running the heating cycle.

NOTE: When the heating function is disabled, if OFF is selected circuit 2 will also be disabled.

13 ADDITIONAL FUNCTIONS

The **Evolution EV HAM** boiler is equipped with an electronic control for efficiently regulating automatic boiler functioning. It also has the following additional control features:

13.1 Pump anti-block function

This function prevents the boiler circulation pumps from seizing up if they have been out of use for a long period. This system remains enabled while the boiler is plugged into the mains.

13.2 Anti-frost function

This function protects the boiler from freezing up during cold weather. If the boiler temperature drops to below 6 °C, the heating circulation pump will start up. If the boiler temperature continues to drop and reaches 4 °C, the burner will start up, heating the installation. When this function has been activated, it will continue working until the boiler reaches 8 °C. This system remains on standby while the boiler is plugged into the mains.

13.3 Boiler pressure sensor function

This function prevents boiler failure caused by a low water level or excess pressure in the boiler. The pressure is detected by a pressure sensor (**10**), and its value appears on the control panel display (see "*Digital display*"). If the pressure drops below 0.5 bar, the electronic control blocks boiler functioning and triggers the "**AP**" alarm on the display. If boiler pressure exceeds 2.5 bar, the "**HI**" warning will flash on the display to warn of the excess pressure. If this should occur we recommend calling the nearest **Technical Assistance Service**, and slightly draining the boiler.

13.4 Telephone relay connection

The **Evolution** boiler is designed to enable a phone relay to be connected for switching the boiler on and off. This feature allows the boiler to be switched on and off remotely, from any location, by means of a phone call. The relay is connected to the boiler via terminal strip **J6** (see "*Electrical Connection Diagram*"). When the telephone relay contact closes the boiler switches on. When the contact opens, the boiler switches off and remains in anti-frost protection and pump anti-block mode.

13.5 Room thermostat connection

The boiler has two terminal strips, **TA₁** and **TA₂**, for connecting room thermostats or room chronothermostats (**J5** and **J7**, see "*Electrical Connection Diagram*"). This allows the heating mode for each circuit installed to be switched off according to the room temperature. To suitably connect them, first remove the bridge joining the terminals of terminal strip **TA₁**, and to connect **TA₂**, simply connect the thermostat to the terminal strip.


Installing a room thermostat will optimise the installation's performance, adapting the heating to the requirements of your home and obtaining enhanced comfort. Also, if the thermostat allows the hours of functioning to be programmed (chronothermostat), it can adapt the heating system to the hours of use of the installation.

13.6 Keypad block function

This function protects the control panel from being accidentally or erroneously pressed while it is being cleaned, by children or by unauthorised persons. When this function is enabled, the electronic control will not react when any of the symbols or touch buttons on the control panel are pressed.

To lock the keypad, keep your finger on the RESET touch button for 5 seconds. The word "**LOC**" will flash on the display until the control panel is unlocked again.


To unlock the keypad, place your finger on the RESET touch button again for 5 seconds. The display will then return to its normal status.

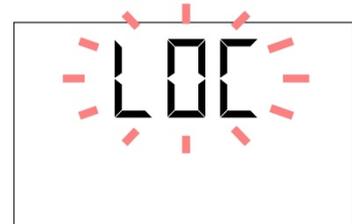

Evolution EV HAM

14 SAFETY CUT-OUTS


The boiler's electronic control system may activate the following safety cut-outs to stop the boiler functioning. When one of these safety cut-outs occurs, the boiler will stop functioning, a cut-out code will flash on the display and the red alarm warning pilot light will flash on the control panel.

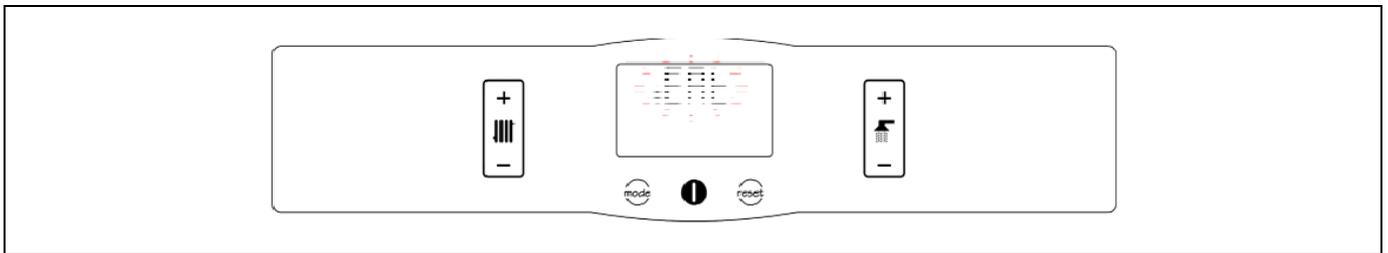

If any of the safety cut-outs described below should occur repeatedly, switch off the boiler and call your nearest official technical assistance service.

14.1 Temperature safety cut-out


When this cut-out occurs, the alarm code **"EAt"** (temperature alarm) will begin to flash on the digital display (19). The burner will switch off and stop heating the installation.

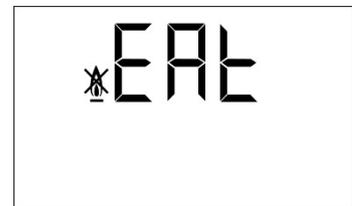

This occurs when the boiler exceeds a temperature of 110 °C. To unblock it, wait until the boiler drops to below 100°C and press the button on the safety thermostat, located inside the boiler on the underside of the electrical box, after first having removed the button cover.

14.2 Burner cut-out

When this cut-out occurs, the alarm code **"EAQ"** (burner alarm) will begin to flash on the digital display (19). The burner will switch off and stop heating the installation.

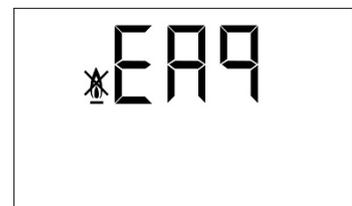

This occurs as a result of an anomaly in the burner (2) or in the fuel installation. To unblock it, press the illuminated button that lights up on the burner.

14.3 Low pressure cut-out

When this cut-out occurs, the alarm code **"EAP"** (pressure alarm) will begin to flash on the digital display (19). The burner and the boiler circulation pumps will switch off, cutting off the heating and water flow to the installation.



This occurs when the boiler pressure drops to below 0.5 bar, preventing the boiler from functioning when the water is drained from the installation, due to either leakage or maintenance operations. To unlock it, fill the installation again until a pressure of 1 - 1.5 bar appears on the "boiler pressure" setting on the display (19).

15 BOILER MAINTENANCE

To maintain the boiler in perfect working order, a yearly overhaul should be performed by **DOMUSA TEKNIK**'s authorised personnel.

15.1 Cleaning the boiler

To keep the boiler in perfect working order, we recommend cleaning the boiler chamber, exhaustion ducts and condenser on a yearly basis. A cleaning brush of a suitable size for cleaning the inside of the exhaustion ducts is supplied with the boiler for this purpose. This brush is located at the rear of the boiler, beside the condenser.

The combustion chamber and exhaustion ducts should not be cleaned using chemical products or hard steel brushes. After any cleaning operation has been carried out, it is important to run several ignition cycles to check all the elements are functioning correctly.

For correct cleaning, the following recommendations should be carefully observed:

Cleaning the boiler body


- Open and remove the outer door of the boiler.
- Remove the burner **(2)** by unscrewing the fixing nut on the top of the burner.
- Remove the combustion chamber door and the exhaustion duct cover, unscrewing the six fixing nuts beside them.
- Clean the exhaustion ducts on the cast iron body, using the cleaning brush supplied with the boiler.
- Clean the boiler combustion chamber. We recommend using a soft brush for scraping the combustion chamber surfaces, and a blower to remove scale.
- After cleaning, replace the combustion chamber door, the exhaustion duct cover, the burner and the outer door of the boiler.

Cleaning the condenser

- Open and remove the top cover of the boiler to access the condenser on the rear of the boiler body.
- Open the top cover of the condenser **(1)** to access its exhaustion ducts. To open this cover, firstly release the two side closures **(7)**, turn the locking plate **(2)** anti-clockwise and pull the cover upwards to remove it.
- Remove the fume deflectors **(6)** inside the fume outlets.
- Clean the exhaustion ducts using the cleaning brush supplied with the boiler. Scale could fall out of the lower condenser cover and come out of the condensation drain, and it is therefore recommendable to pour water into the top of the condenser, for more effective cleaning. This water will be automatically discharged through the condensation drain.
- To clean the outer part of the condenser cylinder, remove the three screws **(3)** and then remove the metal ring **(4)**. Take out the seal **(5)** and use the brush to clean it. Then put the components back in place again and replace and tighten the three screws and the metal ring.
- If the lower condenser cover **(9)** needs cleaning, remove the side cover of the boiler to access it. Firstly remove the bracket **(8)** holding it in place and pull on it to open it. Then pull the lower cover down to open and clean it.
- After cleaning, replace the fume deflectors, the top condenser cover and the top outer cover of the boiler. Then put the cleaning brush back inside the boiler.

Evolution EV HAM

- The condensation siphon should be cleaned once a year. To do this, remove it and wash it in soapy water. Replace the siphon after cleaning.

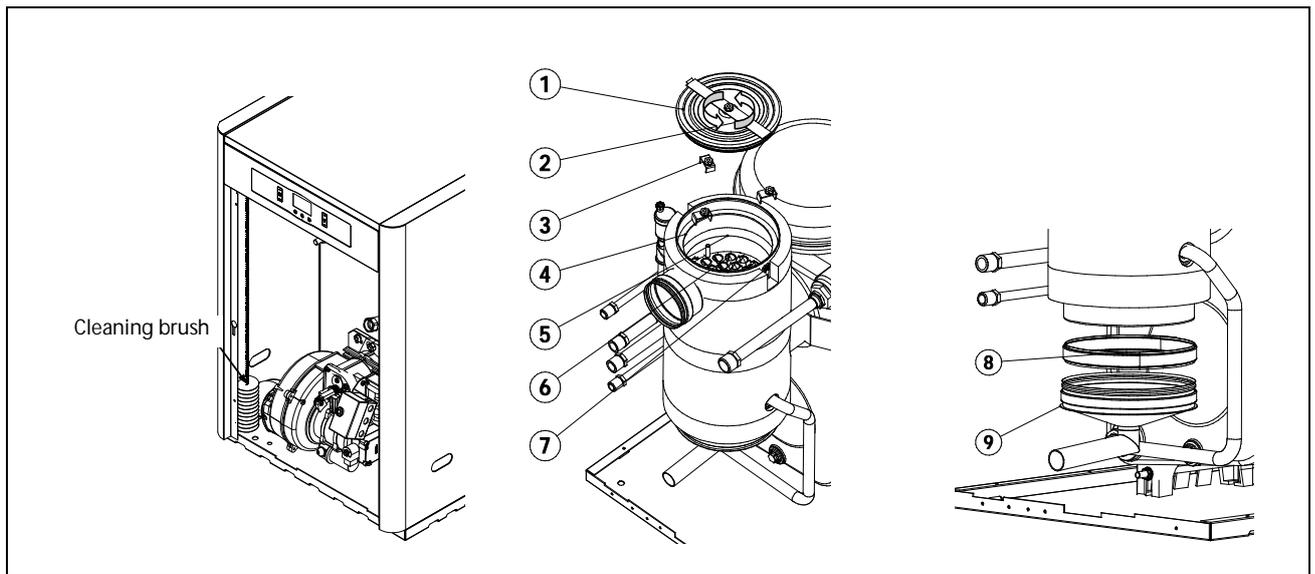

15.2 Anti-frost protection

The **Evolution** boiler has a function for preventing frost damage to the installation. This will function as long as the appliance remains plugged into the mains. Despite this function, and particularly in areas with very cold weather, we recommend taking precautions in order to prevent damage to the boiler. It is advisable to add anti-freeze to the water in the heating circuit. If the boiler is to be out of use for long periods of time, we recommend **draining all the water and leaving it empty**.

15.3 Boiler water characteristics

In areas with water hardness of over 25-30°F, treated water must be used in the heating installation to avoid any scale deposits on the boiler.

It should be noted that even a few millimetres of scale will greatly reduce the boiler's heat conductivity, causing a major drop in performance.

Treated water must be used in the heating circuit in the following cases:


- Very large circuits (containing a large amount of water).
- Frequent filling of the installation.

If repeated partial or total draining of the installation is necessary, we recommend filling it with treated water.

16 CIRCULATING PUMP FLOW CURVES


The hydrodriving pressure available in the installation at the boiler output can be deduced from the following graphs, having taken the boiler pressure drop into account.

16.1 Characteristic curves of the pump

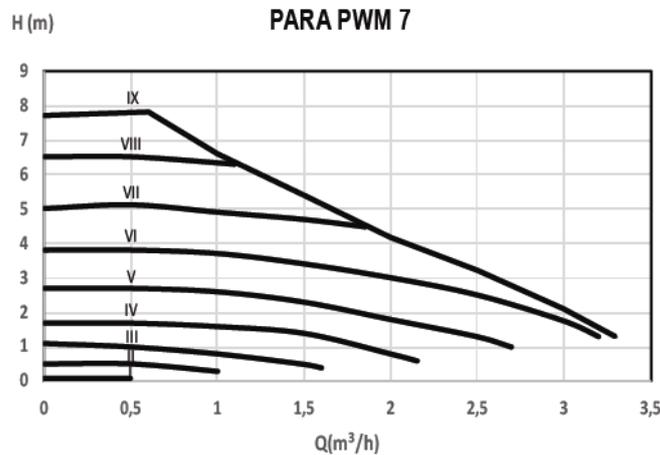

16.2 Regulation of the circulation pump


To regulate the speed of the circulation pump BC1 you should navigate to the "Ub" parameter by touching MODE button and touch ON button (22) to access it. Once inside the setting, using the jog dial on the right side of the display (24) the value changes. After selecting the desired speed, touch the ON touch button to record the value and exit the parameter "Ub".

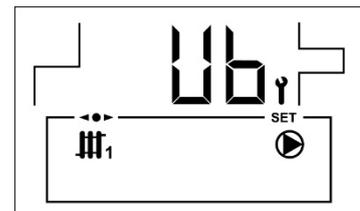


WARNING: Any interference in the operation and installation of the heating circuit must be done by authorised personnel, always respecting current legislation and installation safety standards, both national and local level.

16.3 Pressure drop

Evolution 25 HAM:

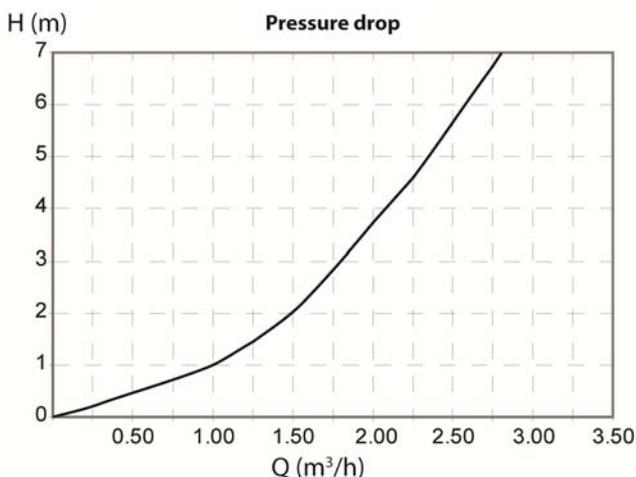


Evolution 35HAM:

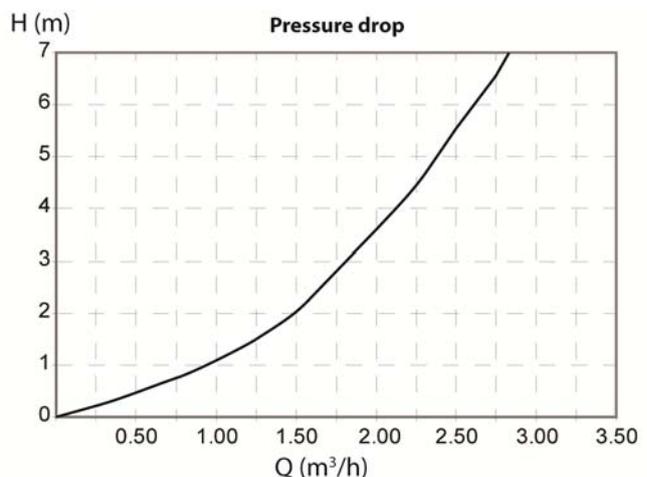

Evolution EV HAM

17 DIAGRAMS AND MEASUREMENTS

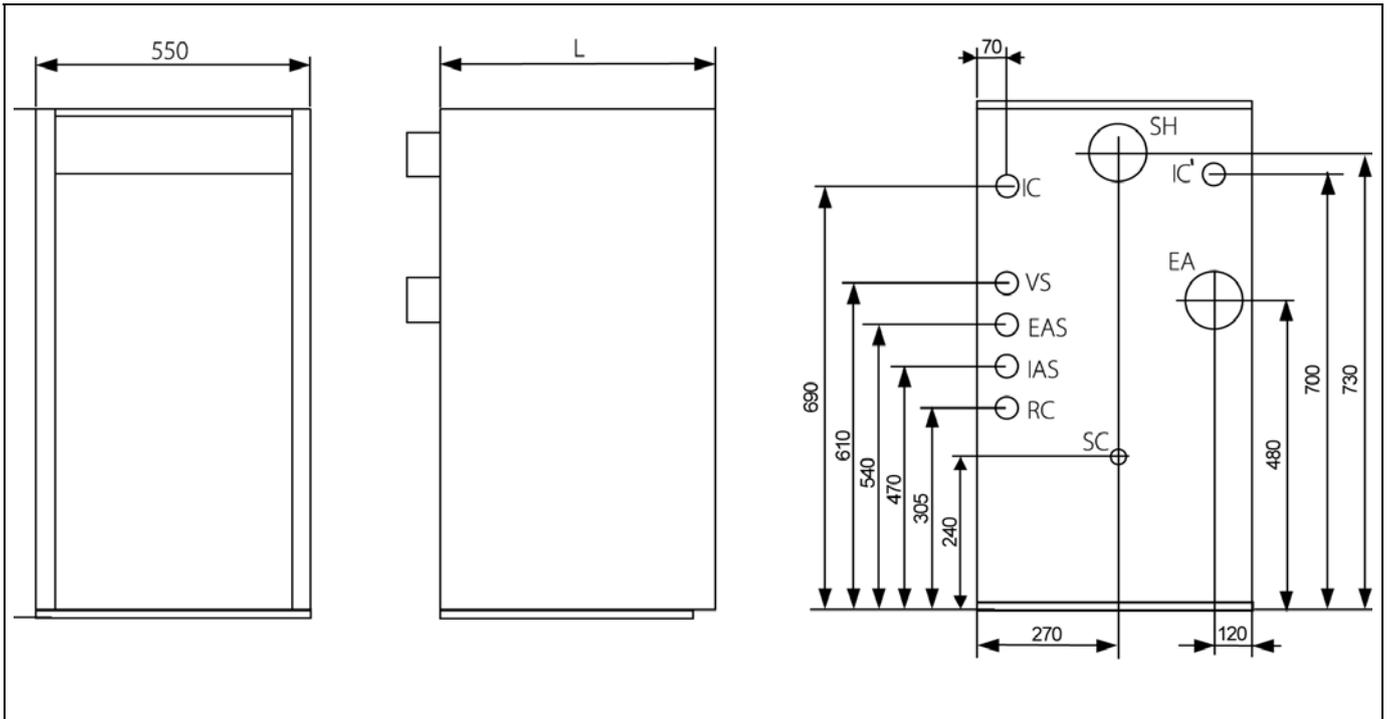

- IC:** Heating outlet.
- IC':** Optional heating flow.
- RC:** Heating return.
- EAS:** Cold water intake.
- IAS:** Hot water outlet.
- VS:** Safety valve.
- SC:** Condensation outlet, 1" H.
- SH:** Fume exhaustion duct, Ø80.
- EA:** Air intake, Ø80.

MODEL	IC, IC' RC	EAS IAS	L MEAS.
EV 25 HAM	1" M	1/2" M	855
EV 35 HAM			955



18 TECHNICAL CHARACTERISTICS

EVOLUTION HAM			EV 25 HAM	EV 35 HAM
Boiler type	-		Condensation	
			Combi	
Rated heat output	P_{rated}	kW	27	37
Useful heat output	P_4	kW	27,1	37,4
Useful heat output (30%)	P_1	kW	8,8	12,2
Seasonal space heating energy efficiency	η_s	%	92	92
Useful efficiency	η_4	% (PCI)	97,71	96,57
		% (PCS)	92,14	91,07
Useful efficiency (30%)	η_1	% (PCI)	104,05	103,8
		% (PCS)	98,12	97,88
Auxiliary electricity consumption at full load	e_{lmax}	kW	0,226	
Auxiliary electricity consumption at part load	e_{lmin}	kW	0,078	
Auxiliary electricity consumption in standby mode	PSB	kW	0,001	
Standby heat loss	P_{stby}	kW	0,12	0,09
Emissions of nitrogen oxides	NOx	mg/kWh	86	79
Declared load profile	-		XL	XL
Water heating energy efficiency	η_{wh}	%	81	80
Daily electricity consumption	Q_{elec}	kWh	0,378	0,286
Daily fuel consumption	Q_{fuel}	kWh	23,875	24,508
DHW Production $\Delta t = 30^\circ C$	l/min.		12,8	17,8
Heating temperature adjustment	$^\circ C$		OFF, 30-85	
DHW temperature adjustment	$^\circ C$		OFF, 30-65	
Maximum safety temperature	$^\circ C$		110	
Maximum pressure for heating mode	bar		3	
Heating expansion vessel capacity	Lts		8	12
Heating water volume	Lts		30	43
Water pressure drop	mbar		25	35
Fume temperature	$^\circ C$		76	83
Volume on fume side	m^3		0,024	0,031
Maximum fume flow	Kg/s		0,0125	0,0140
Fume pressure drop	mbar		0,28	0,295
Combustion chamber length	mm		255	355
Combustion chamber type	-		wet, +2 exhaust duct	
Burner adjustment type	-		ON/OFF	
Electrical supply	-		~220-230 V - 50 Hz - 200 W	
Gross weight	Kg		145	165

Evolution EV HAM

19 ALARM CODES


The **Evolution EV HAM** boiler has an electronic circuit that performs continuous self-testing to detect any operating failures in the boiler. When the electronic control detects malfunctioning, this is indicated by an alarm code flashing on the display. The following list describes the alarm codes that may appear:

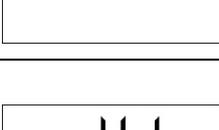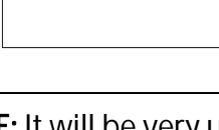CODE	ALARM	DESCRIPTION
	Pressure	The pressure in the installation has dropped to below 0.5 bar. The boiler will cut out. To unblock it, fill the installation at a pressure of 1 - 1.5 bar. This alarm may be set off due to the water having been drained from the boiler or leakage in the installation. If this alarm occurs repeatedly, you should contact the nearest official technical assistance service.
	Temperature	The boiler has exceeded the safety temperature of 110 °C. The boiler will cut out. To unblock it, press the safety thermostat button when the temperature has dropped. If this alarm occurs repeatedly, you should contact the nearest official technical assistance service.
	Burner	The burner has cut out. To unblock it, press the illuminated button on the burner (2) . This alarm is set off when there is a functioning anomaly in the burner or the fuel installation. If this alarm occurs repeatedly, you should contact the nearest official technical assistance service.
	Boiler sensor	The boiler sensor (8) is damaged or disconnected. Contact your nearest official technical assistance service to have it replaced.
	DHW sensor.	The DHW sensor is damaged or disconnected. Contact your nearest official technical assistance service to have it replaced.
	SRAM2/EV flow sensor (only with SRAM2/EV kit)	The underfloor heating sensor is damaged or disconnected. Contact your nearest official technical assistance service to have it replaced.
	Pressure sensor	The pressure sensor (10) is damaged or disconnected. Contact your nearest official technical assistance service to have it replaced.
	Overpressure	This indicates that the water pressure in the boiler is over 2.5 bar, warning that the installation is in overpressure status. Boiler functioning will NOT cut out. To restore normal boiler functioning, drain the boiler until it reaches a pressure of 1 – 1.5 bar. If this warning occurs repeatedly, you should contact the nearest official technical assistance service.

NOTE: It will be very useful for the technical assistance service if you can inform them of the alarm code that has appeared on call-out.

20 CONNECTION DIAGRAM

There are a series of removable terminal strips located on the rear of the control panel, for connecting the various options and components for this model. For correct connection, carefully follow the indications shown below:

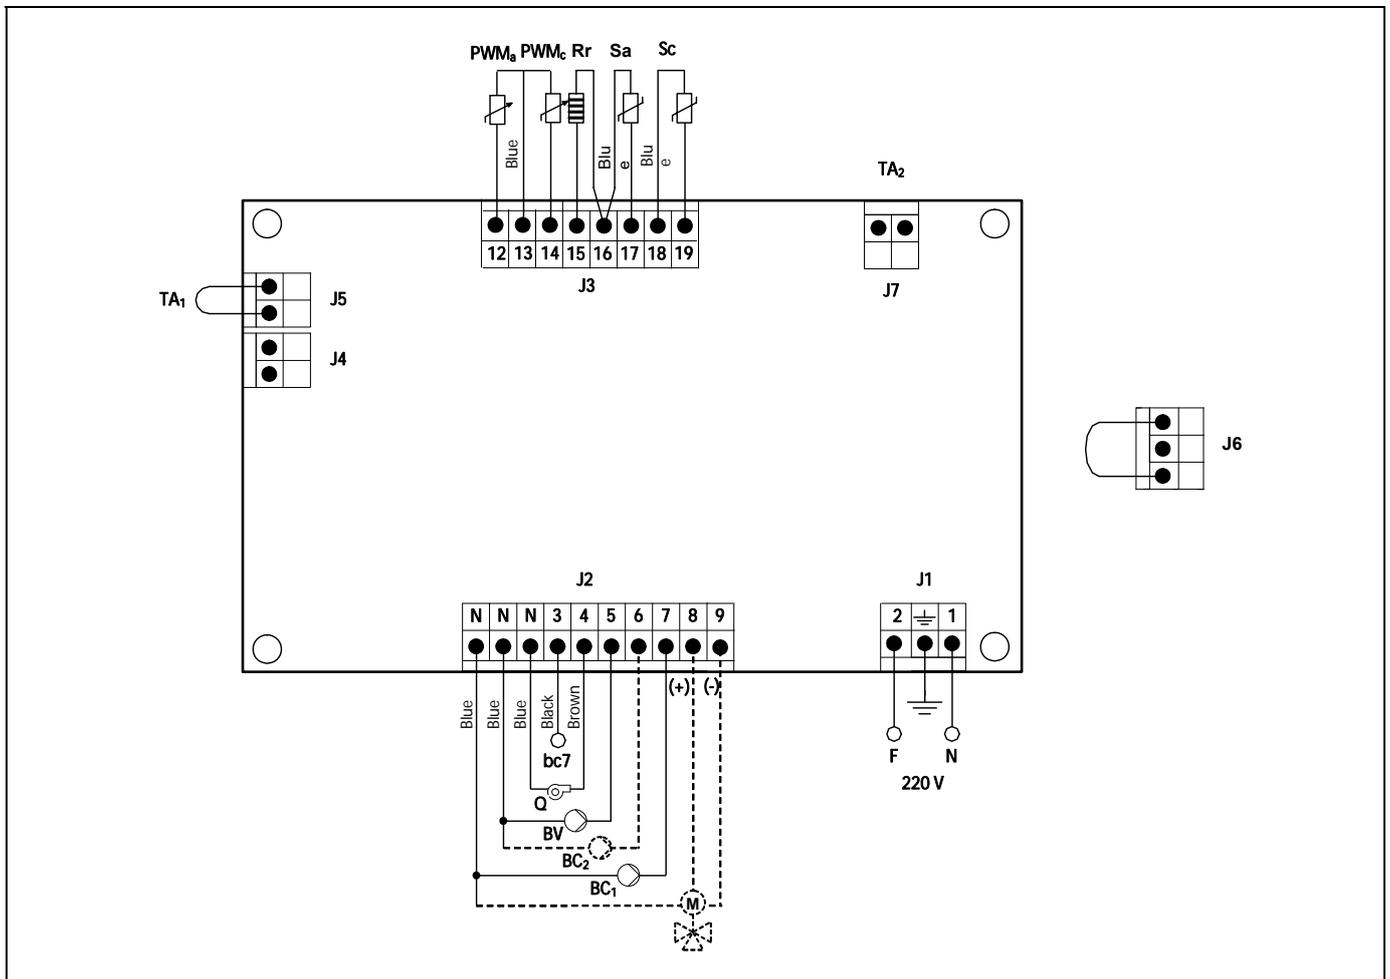

Ph: Phase.

N: Neutral.

bc7: Burner terminal n. 7.

Q: Burner.

BV: DHW charge pump.

BC₁: Heating circuit N. 1 circulating pump.

BC₂: Heating circuit N. 2 circulating pump.

M: Underfloor 3 way valve motor.

TA₁: Heating circuit N. 1 room thermostat.

TA₂: Heating circuit N. 2 room thermostat.

PWM_a: DHW PWM cable.

PWM_c: Heating PWM cable.

Rr: Underfloor heating option resistance.

Sa: DHW temperature sensor.

Sc: Boiler temperature sensor.

J1: Power supply connector.

J2: Components connector.

J3: Sensor connector.


J5: Room thermostat N. 1 connector.

J6: Telephone relay connector.

J7: Room thermostat N. 2 connector.

Evolution EV HAM

21 ELECTRICAL DIAGRAM

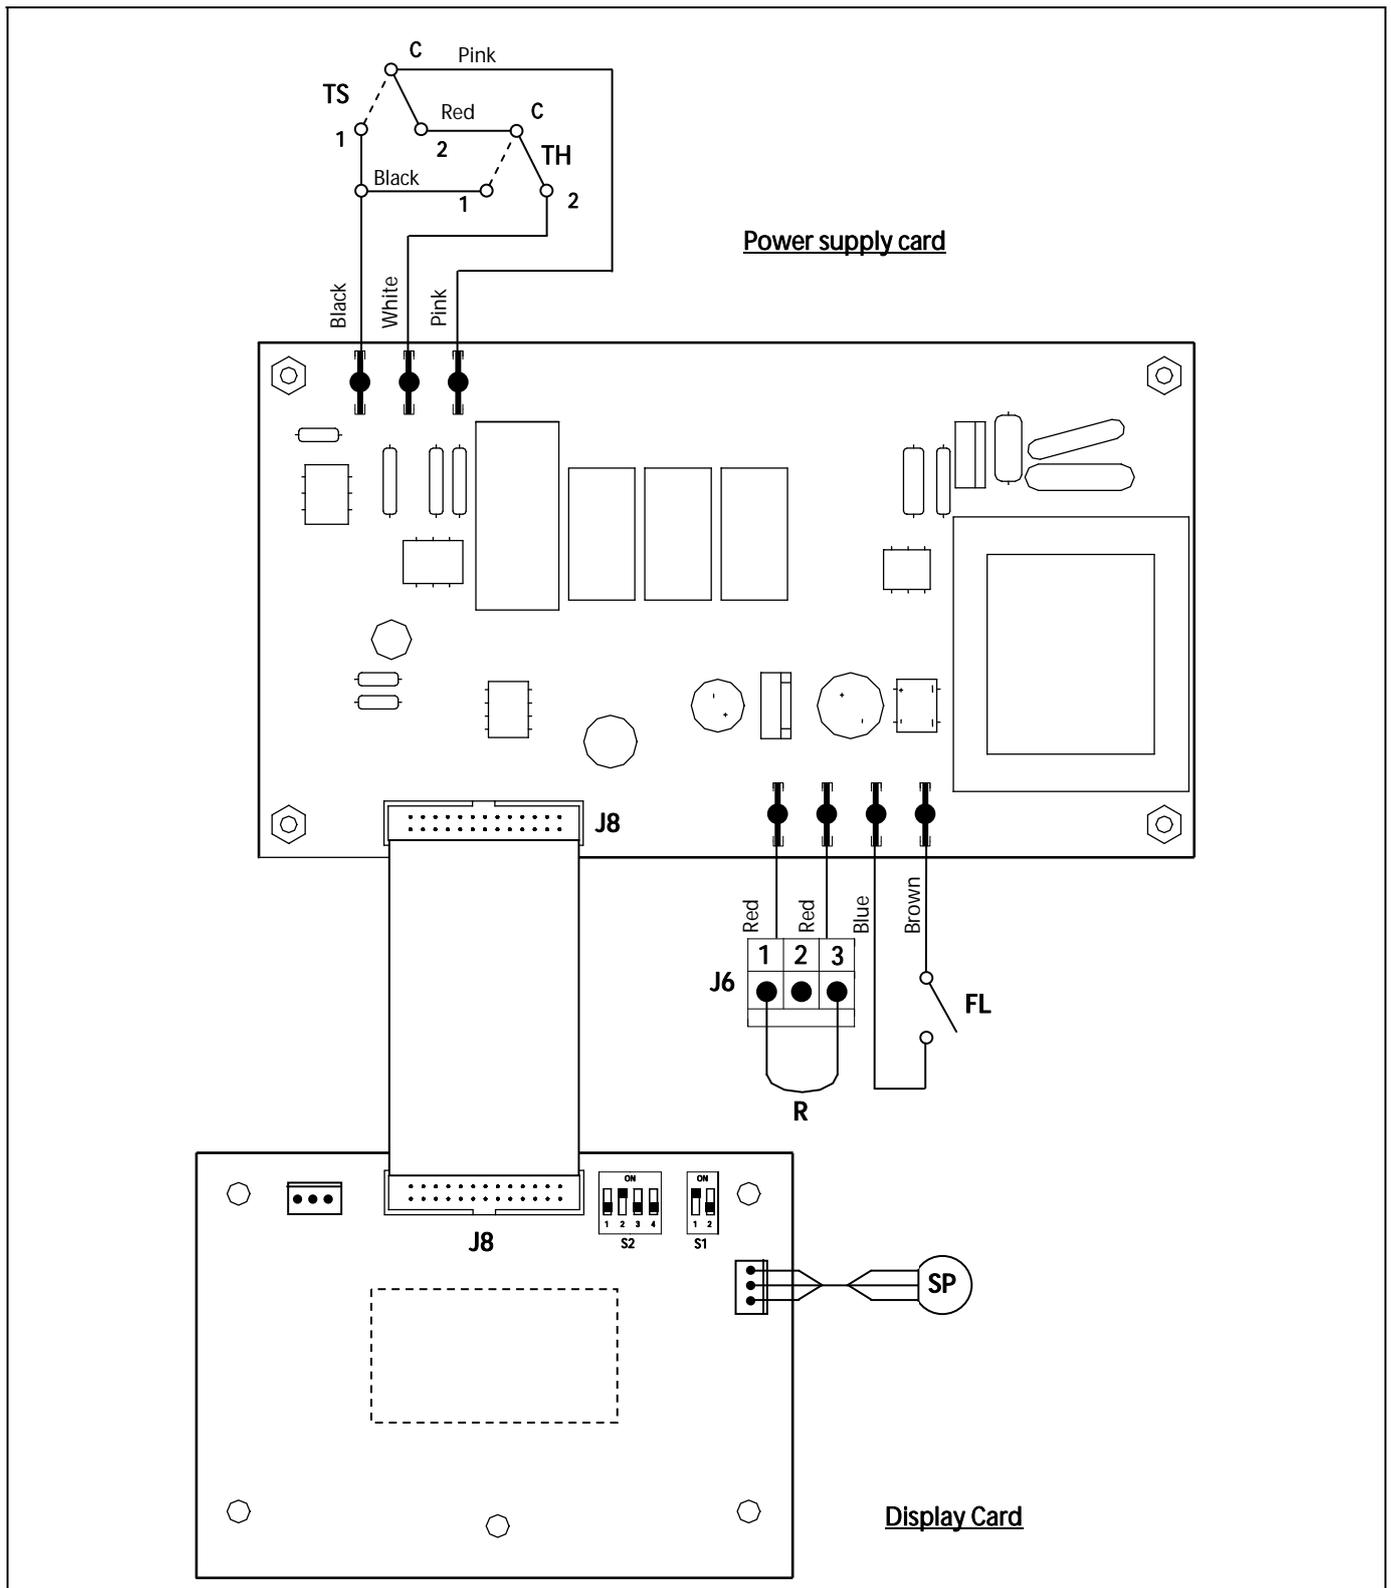

TS: Security thermostat.

TH: Fumes thermostat.

SP: Pressure sensor.

R: Phone relay.

FL: DHW flow switch.

J6: Phone relay connector.

J8: Communication connector.

S1: Boiler model selection switches.

S2: Floor heating selection switches.

22 BURNER

22.1 Assembly

Fix the burner support to the boiler, then fix the burner to the support. This will allow the correct tilt of the flame tube towards the combustion chamber. Fit the intake and return tubes, inserting the oil filter in the intake tube.

22.2 Burner start-up

The "Domestic" burner is equipped with a self-priming pump, which allows the aspiration of fuel from a tank installed at a lower level than the burner, as long as the vacuum measured with the vacuum gauge in the pump does not exceed 0,4 bat (30cmHg).

The suction of fuel must never reach the bottom of the tank, always leaving a minimum distance of 10 cm to the bottom, if possible, the suction kit with float is recommended.

In installations that allow it, the fuel returns must be made to a recirculation filter with air purge, thus avoiding oxidations in the diesel pump.

Ensure there is fuel in the tank, that the oil valves are open and that there is an electric connection to the burner. Turn on the master switch. Unscrew the air bleed screw (manometer point). Then, when the valve opens, remove the photocell sensor and move it towards a light source until fuel comes out. Disconnect the burner and screw the bleed screw back in.

22.3 Adjusting the combustion conditions

As each particular installation has a different combustion circuit, it is essential to adjust the combustion conditions of each boiler. For the **guarantee to be valid**, the burner must be adjusted by an **official DOMUSA TEKNIK Technical Assistance Service**.

Observe the flame. If there is insufficient combustion air, it will be dark in colour and will produce smoke, obstructing the flue outlet.

On the contrary, if there is an excess of combustion air, the flame will be pale or bluish in colour. This will reduce the performance of the boiler and it will fail to comply with anti-pollution standards, and the excess air may also hinder the ignition process.

The flame should be orange in colour.

If the shape of the boiler makes it difficult or impossible to observe the flame, the combustion air flow can be regulated by observing the smoke coming out of the flue. If the smoke is dark in colour, more air will need to be provided to the burner, and if it is very white, the air in the burner will need to be decreased until no smoke at all is observed.


If you have a device for determining the composition of the combustion gases, this will be the best guide for flame adjustment. If not, simply follow the above indications.

To adjust the air and burner line conditions, carefully follow the instructions given below.

Evolution EV HAM


Primary air adjustment

To adjust the primary combustion air, turn the screw using a 6 mm. Allen key, as shown in the diagram. Turn it clockwise to increase the airflow, and anticlockwise to decrease it.

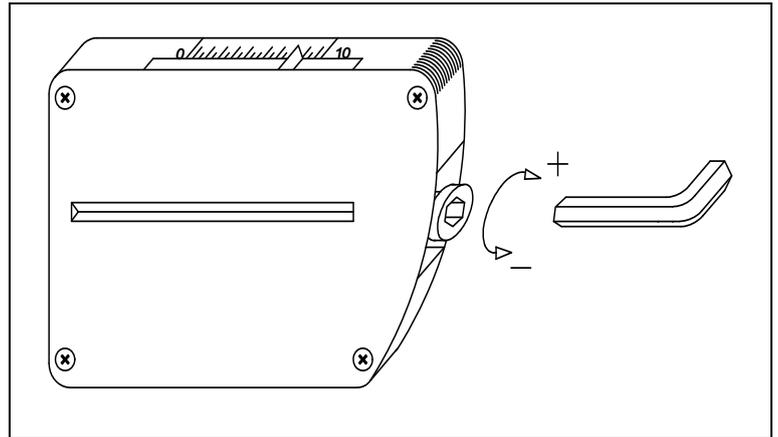


Combustion line adjustment

To adjust the combustion line, loosen the combustion line blocking screw "BL". Turn the line regulator "RL" clockwise to increase the airflow and anticlockwise to decrease it. After adjustment, tighten the combustion line blocking screw "BL".

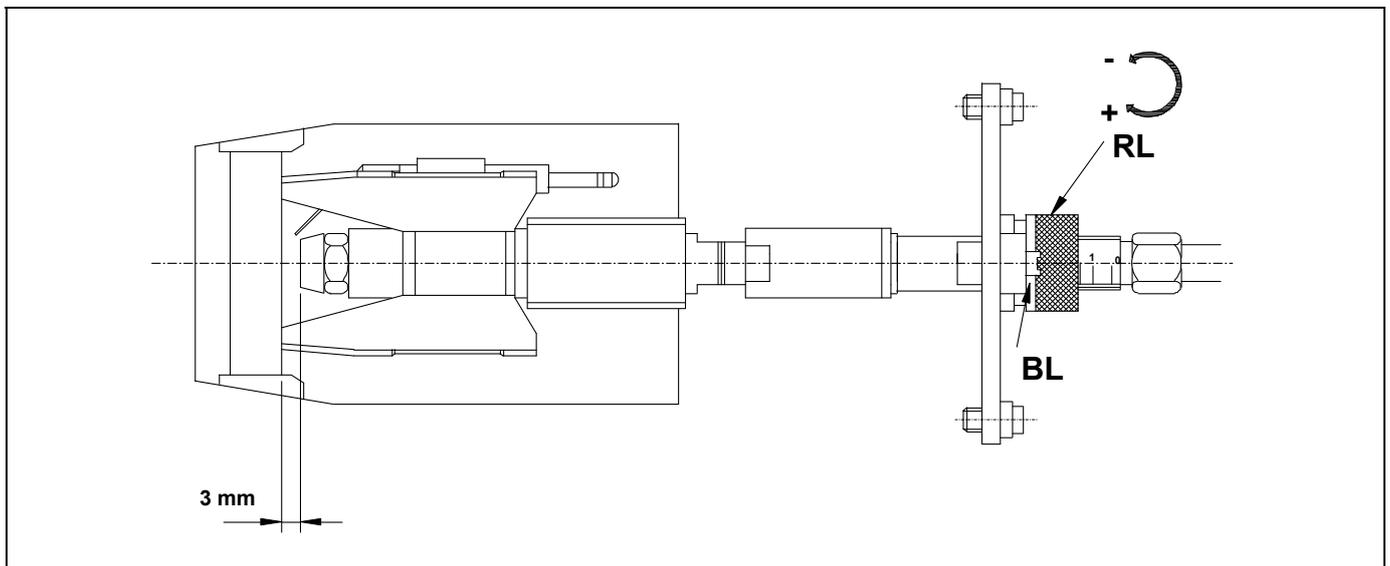

Correct position of electrodes



To ensure correct ignition of the "Domestic" burner, the measurements shown in the diagram must be observed. Also ensure the electrode fixing screws have been screwed in place before replacing the flame tube.

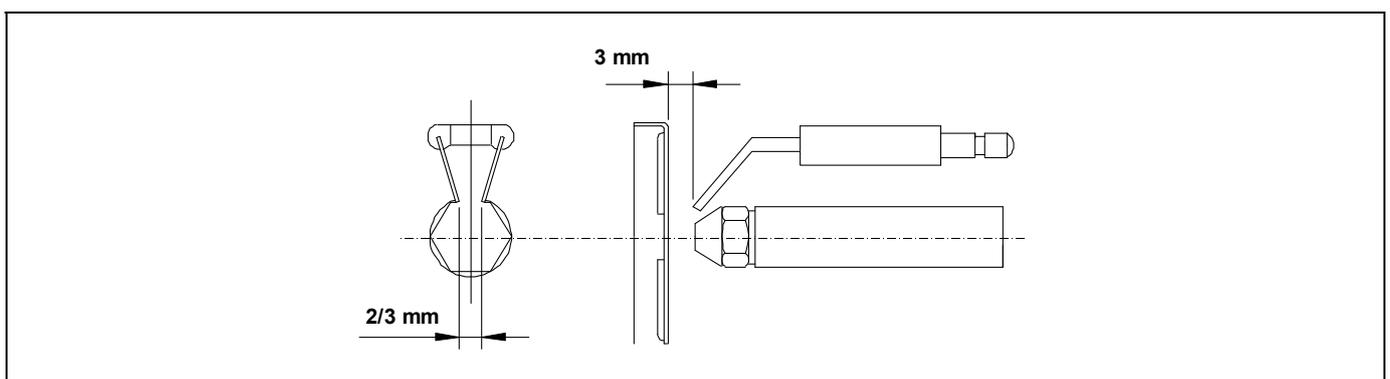

22.4 Oil pressure adjustment


To adjust the oil pump pressure, turn the screw (1) clockwise to increase the pressure, and anticlockwise to decrease it.

- 1 - Pressure adjustment.
- 2 - Vacuum gauge point.
- 3 - Valve.
- 4 - Manometer point.
- 5 - Nozzle outlet.
- 6 - Return.
- 7 - Intake.

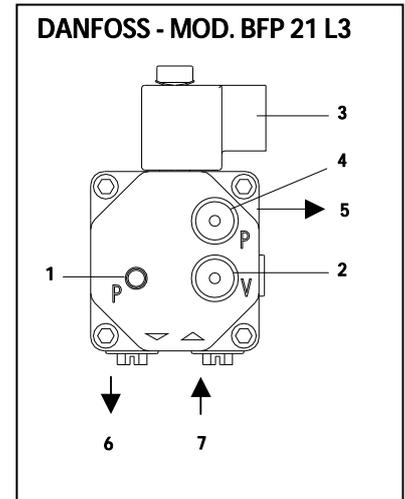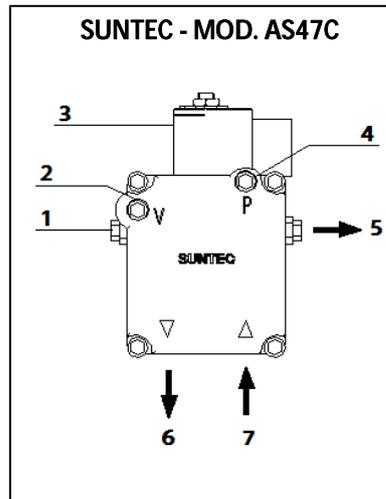

22.5 Oil supply piping diagrams

The diagrams and tables below correspond to installations without reductions and with a perfect hydraulic seal. It is recommended to use copper pipes. A pressure drop of 0.4 bar (30 cmHg) must not be exceeded.

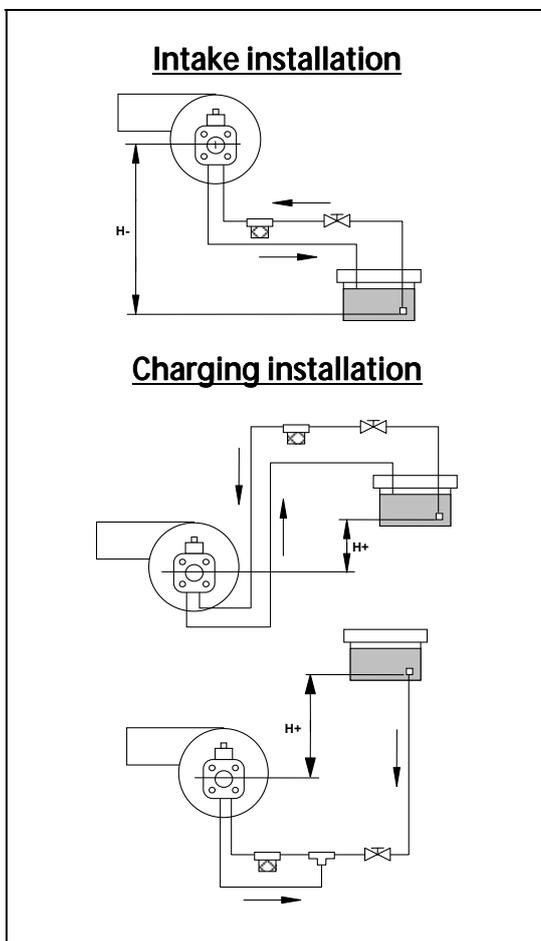

Intake installation		
H- (m)	Pipe length	
	Øint 8 mm.	Øint 10 mm.
0.0	34	82
0.5	30	72
1.0	25	62
1.5	21	52
2.0	17	42
2.5	13	32
3.0	9	21
3.5	6	16

Charging installation		
H+ (m)	Pipe length	
	Øint 8 mm.	Øint 10 mm.
0.5	36	80
1.0	42	90
1.5	46	100
2.0	50	100

Evolution EV HAM

22.6 Technical specifications


MODEL		EVOLUTION EV 25 HAM	EVOLUTION EV 35 HAM
Consumption max.	Kg/h	2,3	3,1
Power	kW	27	37
Motor power.	W	200	
Functioning type		On/Off	
Power supply		220 V - 50 Hz	

22.7 Nozzles

Evolution boilers are supplied with the burner fitted, together with its corresponding nozzle and a standard pre-adjustment. The following table shows the nozzles and adjustments for each particular model:

MODEL	Nozzle	Burner pressure (bar)	Air adjustment	Line adjustment
EVOLUTION EV 25 HAM	0,60 80° H	10	4	1
EVOLUTION EV 35 HAM	0,75 60° H	12	4	1

22.8 Electrical connection diagram

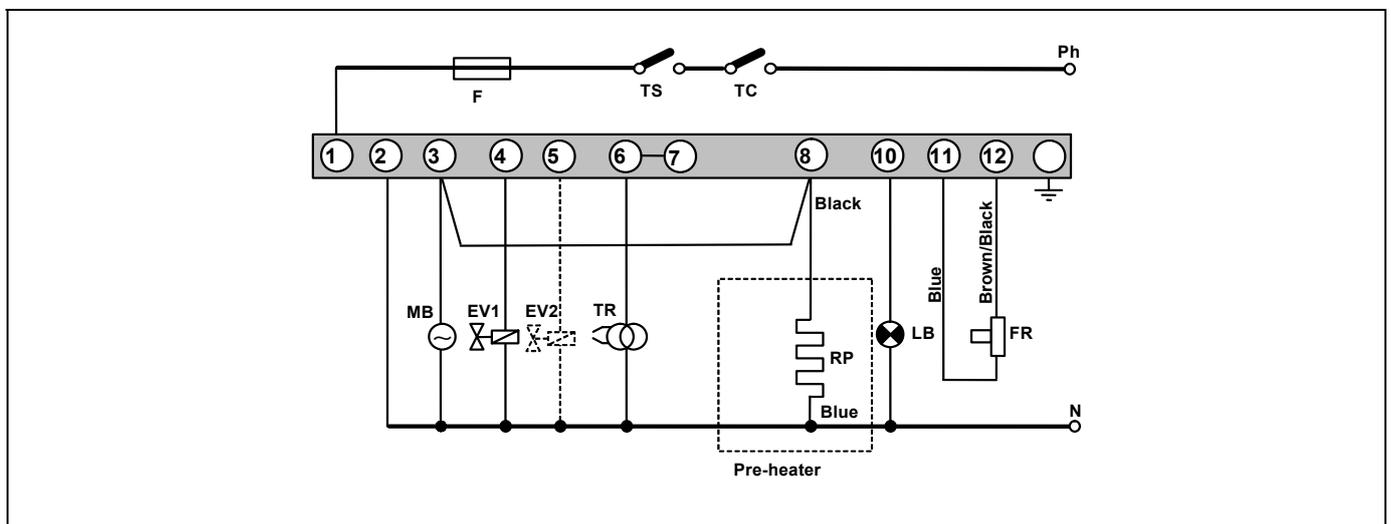


TC: Boiler Thermostat.
TS: Safety Thermostat.
F: Fuse.
LB: Cut-out Light.
FR: Photocell.
TR: Transformer.

MB: Motor Pump.
EV: Valve.
RP: Preheater.
Ph: Phase.
N: Neutral.

22.9 Quick connector

To connect and disconnect the red oil intake tube to the nozzle, proceed as follows:


- Press the connector ring in the direction of the arrow, pulling on the red tube at the same time.

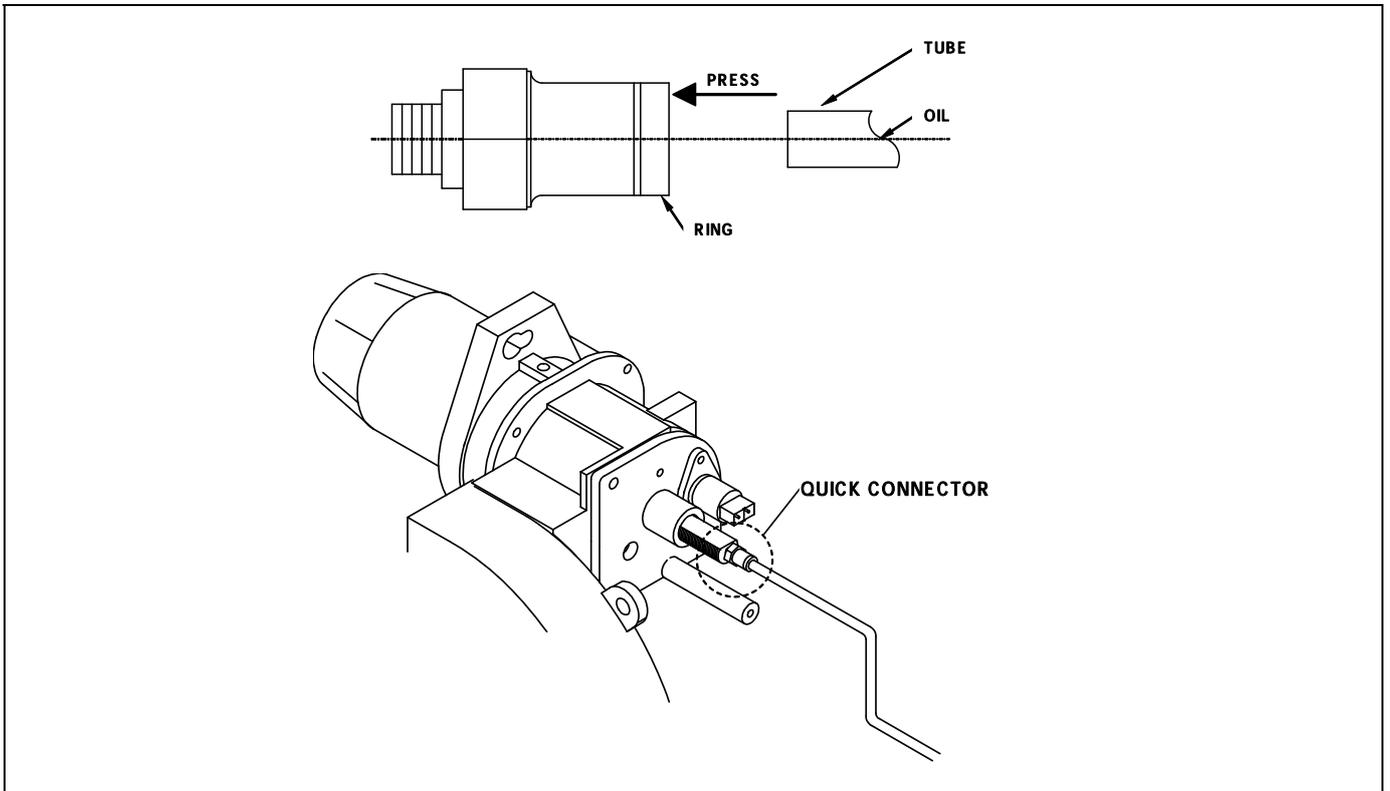

Evolution EV HAM

22.10 Burner control operating sequence

The burner's LMO control box has a reset button which is the key element for resetting the burner control and activating/deactivating the diagnosis functions. The multi-colour LED on the reset button is the indicator for visual diagnosis. The button and the LED are located under the transparent cover of the reset button. During normal functioning, the various operating statuses are indicated in the form of colour codes (see the colour code table below). During ignition, the indication is as shown in the following table:

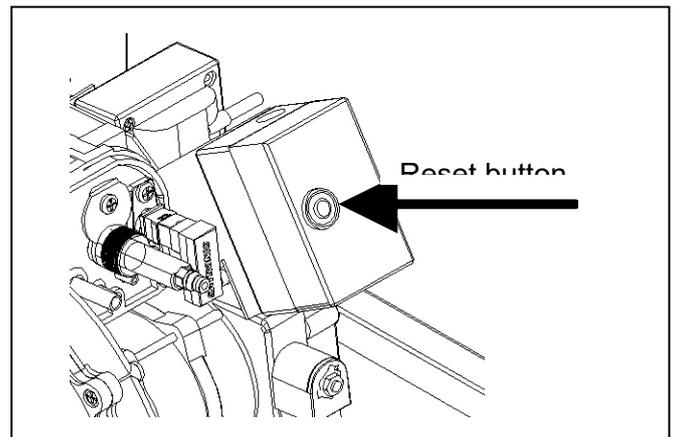

Colour code table for multi-colour indicator lights (LEDs)		
Status	Colour code	Colour
Wait time "tw", other stanby statues	○	Off
Fuel pre-heater on	●	Yellow
Ignition phase, controlled ignition	● ○ ● ○ ● ○ ● ○ ● ○	Flashing yellow
Functioning, flame Ok	□	Green
Functioning. flame not OK	□ ○ □ ○ □ ○ □ ○ □ ○	Flashing green
External light during burner ignition	□ ▲ □ ▲ □ ▲ □ ▲ □ ▲	Red/green
Undervoltage	● ▲ ● ▲ ● ▲ ● ▲ ● ▲	Yellow/red
Failure, alarm	▲	Red
Error code output (see "Error code table")	▲ ○ ▲ ○ ▲ ○ ▲ ○ ▲ ○	Flashing red
Interface diagnosis	▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲	Flashing red light

..... Steady light
○ Off

▲ Red
● Yellow
□ Green

23 FAILURES

This section provides a list of the most common burner and boiler failures.

Burner error code

We have already mentioned that the burner is equipped with a cut-out system, indicated by the reset button light. It may cut out accidentally, and in this case the steady red light on this button will come on. You may unblock it by pressing the button for approx. 1 second. When the burner is blocked and the steady red light is on, visual failure diagnosis may be activated, in accordance with the error code table. To enter visual failure diagnosis mode, hold down the reset button for at least three seconds.

Error code table		
Red flashing LED code	"AL" on term. 10	Possible cause
Flashes 2 times	On	No flame established when ignition safety time ends. - Fuel valves defective or dirty - Flame detector defective or dirty - Burner maladjustment, no fuel - Ignition unit defective
Flashes 4 times	On	External light during burner ignition
Flashes 7 times	On	Excessive flame loss during functioning (limited number of repetitions) - Fuel valves defective or dirty - Flame detector defective or dirty - Burner maladjustment
Flashes 8 times	On	Supervision of fuel pre-heater time
Flashes 10 times	On	Cabling fault or internal failure, output contacts, other failures

During the failure diagnosis time, the control outputs are disabled and the burner remains off. To exit failure diagnosis and activate the burner again, reset the burner control. Hold down the reset button for approx. 1 second (<3 s).

Boiler failures

FAILURE	CAUSE	SOLUTION
RADIATOR DOES NOT HEAT UP	- The pump is not turning - Air in hydraulic circuit	Unblock the pump Drain the installation and the boiler (the automatic air drain valve cap must always be loose)
EXCESSIVE NOISE	- Burner badly adjusted - Flue not correctly sealed - Flame unstable - Flue not insulated	Adjust it correctly Eliminate any leaks Examine the burner Suitably insulate it

Evolution EV HAM


Circulating pump alarms

The high efficiency pumps include a Led (light) which displays their status.

PUMP LIGHT	DESCRIPTION	STATUS	CAUSE	SOLUTION
It is lit green	The pump is functioning	The pump operates according to its setting	Standard functioning	
It flashes green	Standby mode (PWM version)	The pump is in standby mode		
It flashes red/green	The is ready for service but is not functioning	The pump will start up again automatically once the error has been solved	1. Low voltage $U < 160 \text{ V}$ or Excess voltage $U > 253 \text{ V}$	1. Check the power supply $195 \text{ V} < U < 253 \text{ V}$
			2. Excess temperature of the module: the temperature of the motor is too high	2. Check the room temperature and that of the fluid
Flashes red	The pump is out of order	The pump is stopped (blocked)	The pump does not start up automatically.	Change the pump. Please contact your nearest official technical assistance service to have it replaced
Light off	There is no power supply	The electrical system is not receiving power supply	1. The pump is not connected to the power supply	1. Check the connection of the cable
			2. The LED is faulty	2. Check if the pump works
			3. The electrical system is faulty	3. Change the Pump. Change the pump. Please contact your nearest official technical assistance service to have it replaced

24 SPARES LIST


Boiler

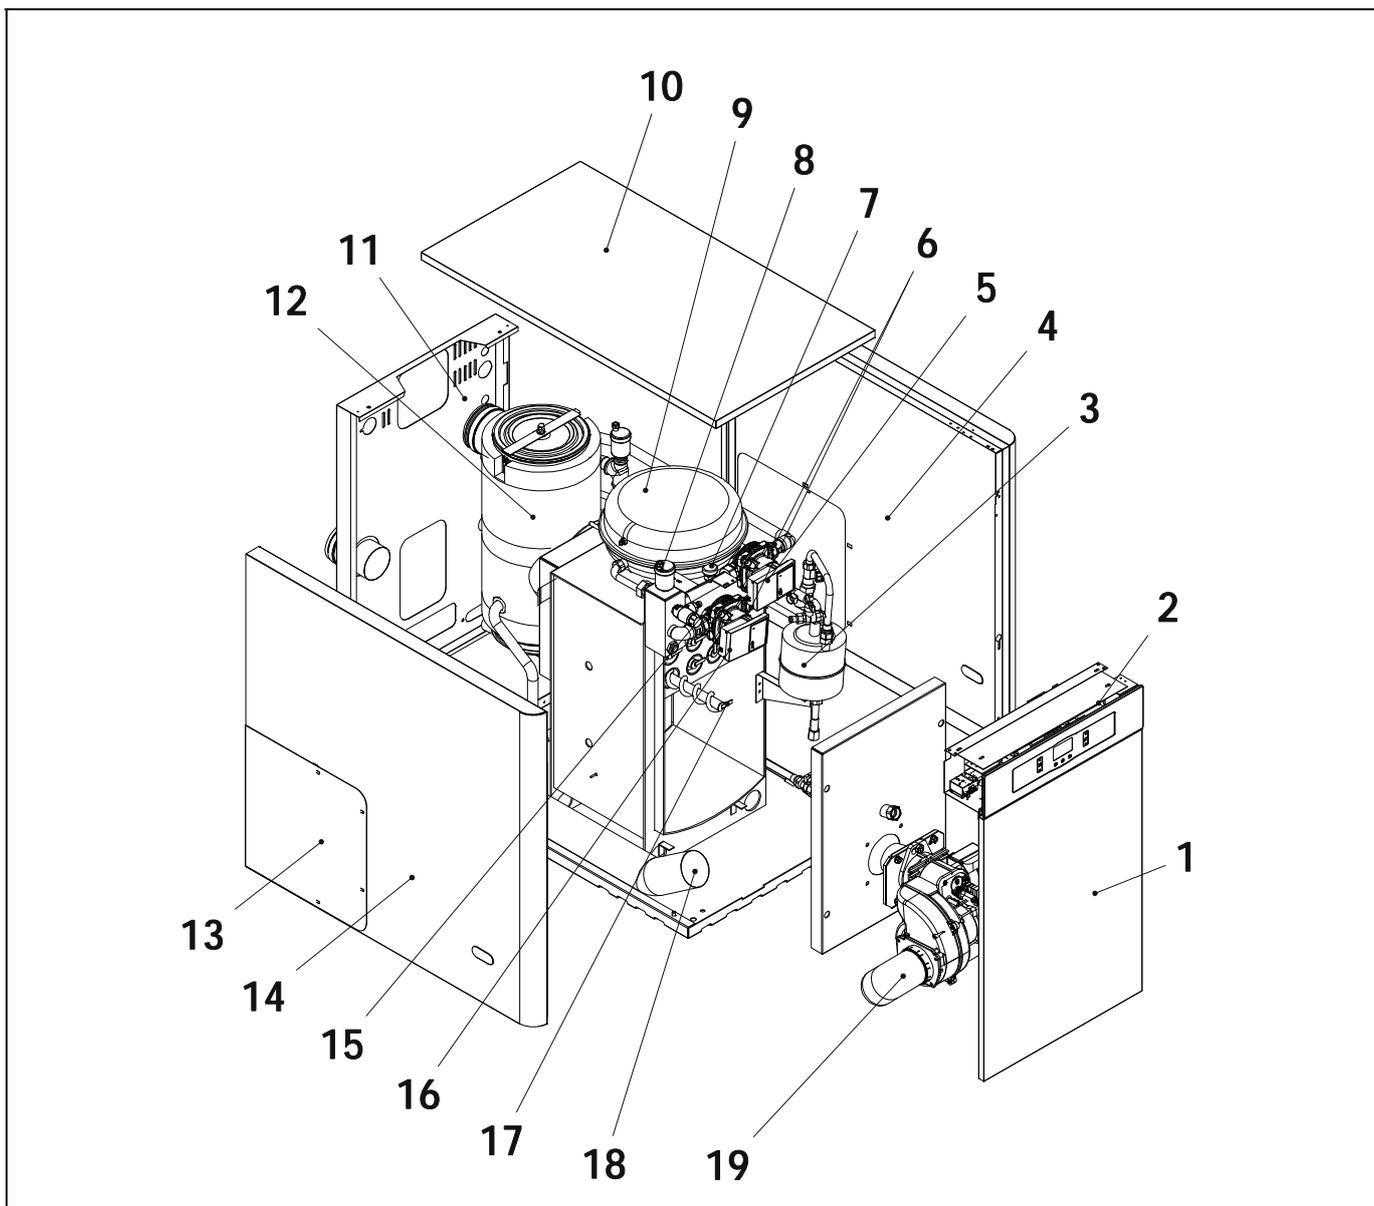

<u>Pos.</u>	<u>Code</u>	<u>Name</u>	<u>Pos.</u>	<u>Code</u>	<u>Name</u>
1	CEXT000717	Door	11	CEXT001253	Rear panel EV 25/35
2	SELEEVC008	Electrical board	12	SCON000803	Condenser
3	CFOV000033	Heat exchanger EV 25	13	CEXT000975	Side cover
	CFOV000067	Heat exchanger EV 35	14	CEXT000702	Left side EV 25
4	CEXT000703	Right side panel EV 25		CEXT000725	Left side EV 35
	CEXT000736	Right side panel EV 35	15	CVAL000004	Safety valve
5	CFOV000148	Heating pump	16	CFOV000148	Hot water pump
6	CVAL000006	One-way valve	17	CTOE000124	Deflector EV 25
7	CFOV000024	Air drain valve		CTOE000126	Deflector EV 3
8	CELC000252	Pressure sensor	18	CFER000051	Extraflex tube
9	CFOV000025	Expansion vessel EV 25	19	RQUEEVC007	Burner D3 EV 25
	CFOV000043	Expansion vessel EV 35		RQUEEVC009	Burner D4 EV 35
10	CEXT001252	Top cover EV 25			
	CEXT001251	Top cover EV 35			


Evolution EV HAM

Electrical main board

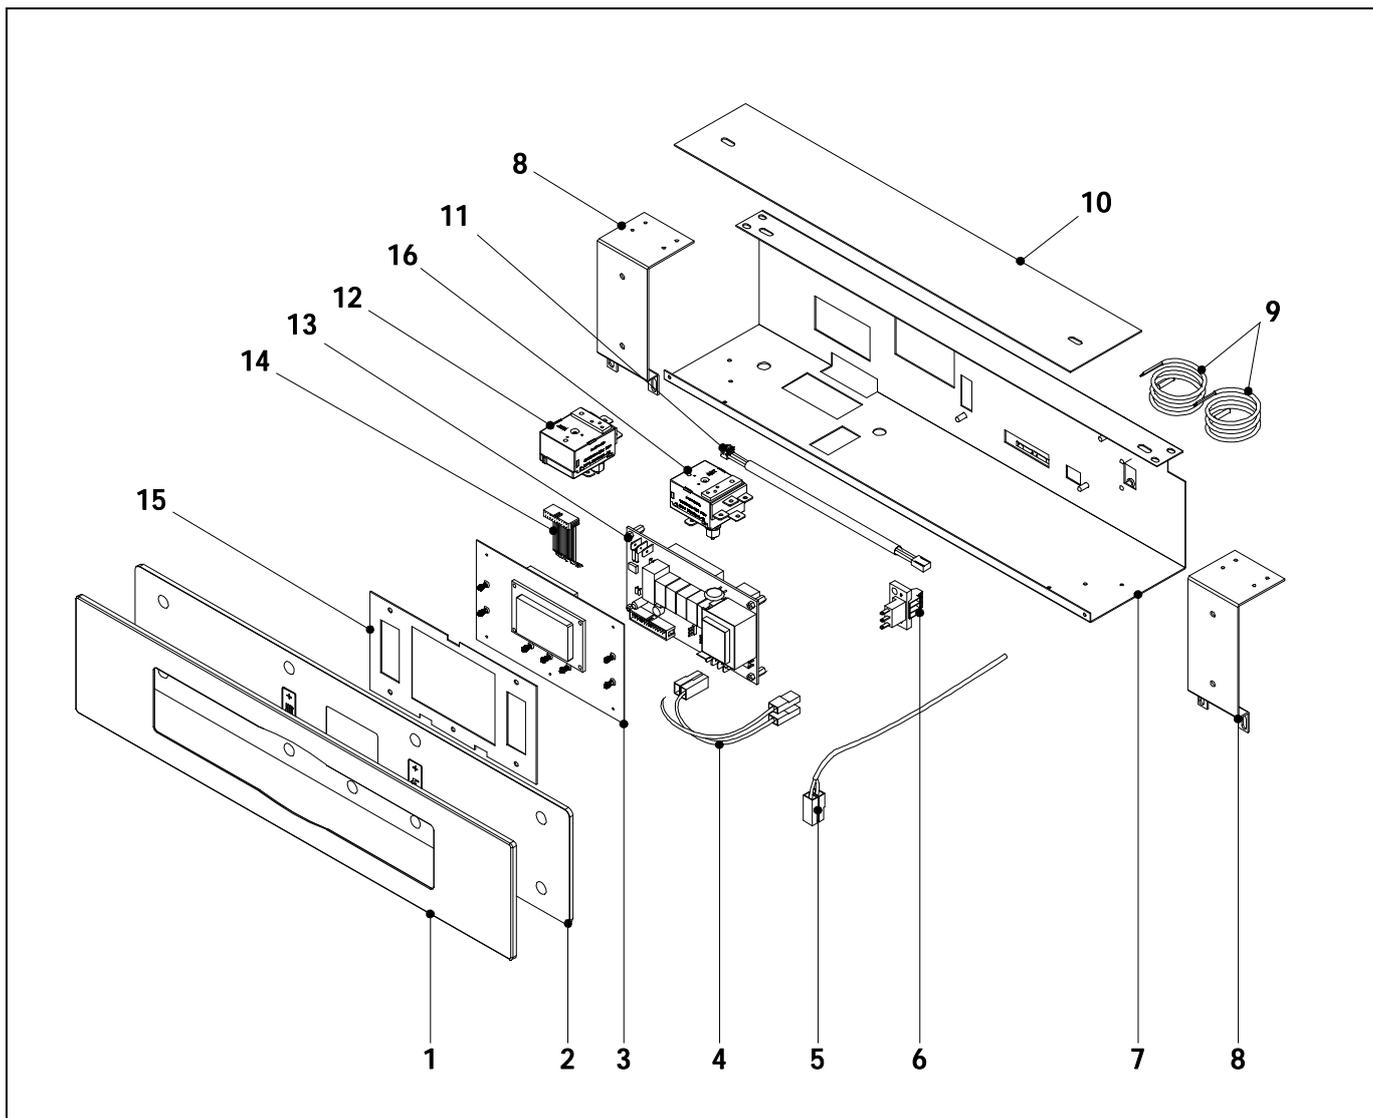

<u>Pos.</u>	<u>Code</u>	<u>Name</u>
1	CELC000294	Control panel embellisher
2	COTR000046	Main board glass
3	CELC000360	Display card
4	CMAZ000128	Cable harness
5	CELC000240	Flowswitch connector
6	CELC000036	Weidmuller strip 3 poles
7	SEPO001947	Drawer
8	SEPO001325	Panel fastening
9	CELC000234	Temperature Evolution sensor 0,90 mts.
10	SEPO001326	Drawer cover
11	CELC000255	Pressure sensor cable
12	CELC000022	Safety thermostat 110° 1,5m
13	CELC000358	Power supply card
14	CELC000298	Electronic cards cable
15	SCHA008320	Display suport
16	CELC000022	Fumes thermostat

Burner

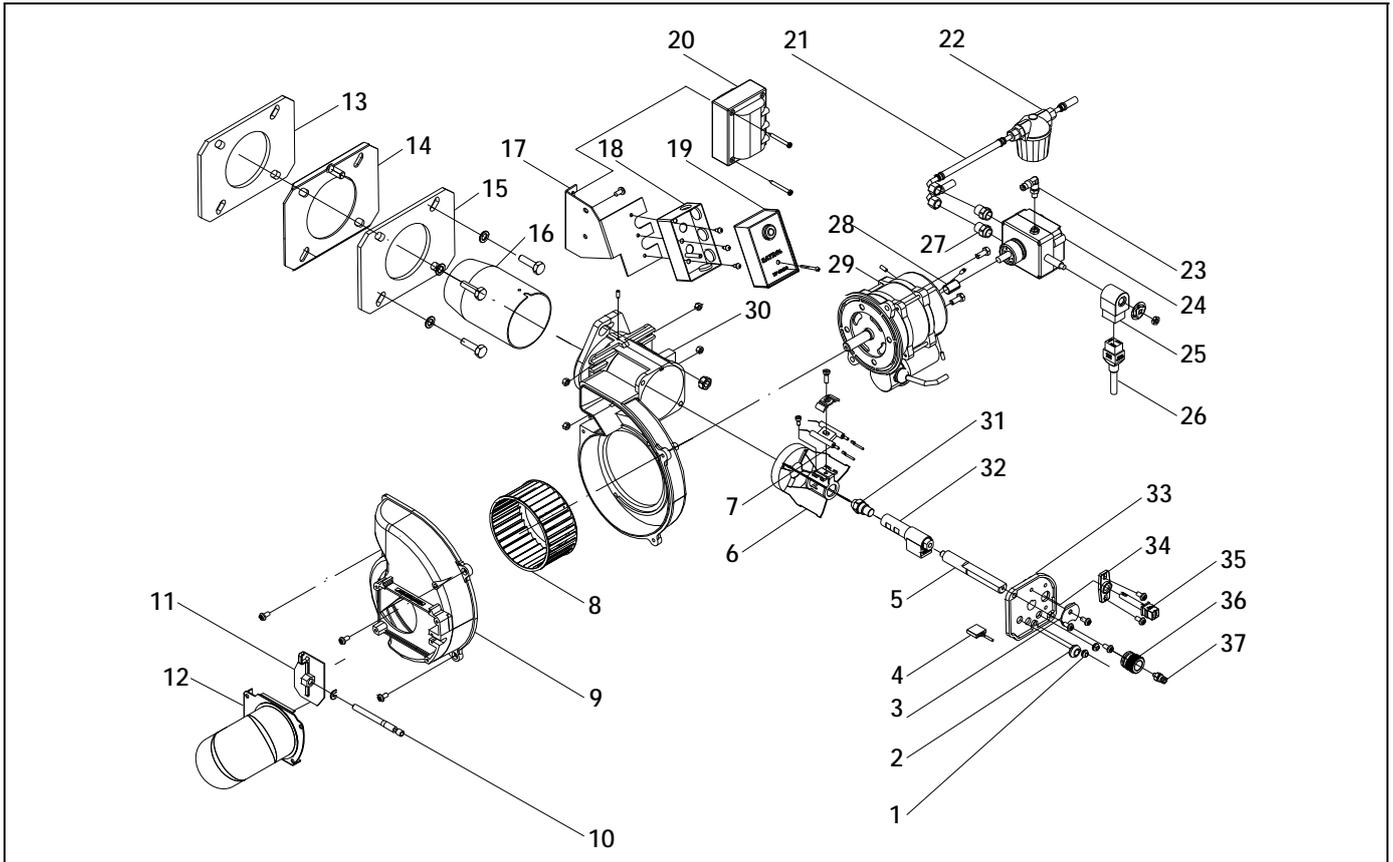

<u>Pos.</u>	<u>Code</u>	<u>Name</u>	<u>Pos.</u>	<u>Code</u>	<u>Name</u>
1	CFER000032	Cable gland	20	CQUE000005	Transformer
2	CFER000033	Cable gland	21	CQUE000147	Oil hose
3		Line fastening	22	CQUE000055	Oil filter
4	CQUE000027	Preheater cable	23	CTOR000007	Elbow connector
5	CTOE000063	Burner line D3	24	CQUE000011	Oil pump Suntec
	CTOE000067	Burner line D4		CQUE000088	Oil pump Danfoss
6	CQUE000155	Turbulator disc D3	25	CQUE000056	Valve coil Suntec
	CQUE000022	Turbulator disc D4		CQUE000089	Valve coil Danfoss
7	CQUE000019	Set of electrodes	26	CQUE000054	Valve coil cable Suntec
8	CQUE000044	Fan		CQUE000124	Valve coil cable Danfoss
9	CQUE000095	Air adjustment support	27	CTOE000065	Counter thread
10	CTOE000064	Air adjustment screw	28	CQUE000004	Motor pump coupling
11	CQUE000151	Air adjustment plate D3	29	CQUE000102	Motor
11	CQUE000152	Air adjustment plate D4	30	CQUE000094	Motor support
12	CGAS000220	Manifold	31	CQUE000206	Nozzle OD-H 0,60 – 80° (D3)
13	CQUE000033	Flange seal		CQUE000081	Nozzle OD-H 0,75 – 60° (D4)
14	SATQJE0001	Flange	32	CQUE000061	Preheater
15	CQUE000158	Support seal	33	CQUE000096	Line cover
16	CQUE000200	D3 tube	34	CQUE000223	Photocell support
	CQUE000198	D4 tube	35	SOPE000241	Photocell
17		Transformer support	36	CTOE000054	Line adjustment nut
18	CQUE000129	Control box plugs	37	CTOR000006	Straight connector
19	CQUE000169	Control box			

DOMUSA

T E K N I K

MAILING ADDRESS

Apartado 95
20730 AZPEITIA
Tel: (+34) 943 813 899

HEADQUARTERS & FACTORY

B° San Esteban s/n
20737 RÉGIL (Guipúzcoa)

www.domusateknik.com

DOMUSA TEKNIK reserves the right to make modifications of any kind to its product characteristics without prior notice.



CDOC001142

04/03/22